

# NPort 5110 Series User's Manual

---

First Edition, December 2004

[www.moxa.com/product](http://www.moxa.com/product)



## **Moxa Technologies Co., Ltd.**

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231

Web: [www.moxa.com](http://www.moxa.com)

### **MOXA Technical Support**

Worldwide: [support@moxa.com.tw](mailto:support@moxa.com.tw)

The Americas: [support@moxa.com](mailto:support@moxa.com)

# **NPort 5110 User's Manual**

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

## **Copyright Notice**

Copyright © 2004 Moxa Technologies Co., Ltd.  
All rights reserved.  
Reproduction without permission is prohibited.

## **Trademarks**

MOXA is a registered trademark of Moxa Technologies Co., Ltd.  
All other trademarks or registered marks in this manual belong to their respective manufacturers.

## **Disclaimer**

Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.

Moxa provides this document “as is,” without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Moxa Technologies assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

# Table of Contents

<b>Chapter 1</b>	<b>Introduction .....</b>	<b>1-1</b>
	Overview.....	1-2
	Package Checklist.....	1-2
	Product Features .....	1-2
	Product Specifications .....	1-3
<b>Chapter 2</b>	<b>Getting Started .....</b>	<b>2-1</b>
	Panel Layout.....	2-2
	Connecting the Hardware.....	2-2
	Connecting the Power .....	2-2
	Connecting to the Network.....	2-3
	Connecting to a Serial Device .....	2-3
	LED Indicators .....	2-3
<b>Chapter 3</b>	<b>Initial IP Address Configuration.....</b>	<b>3-1</b>
	Initializing NPort 5110's IP Address .....	3-2
	Factory Default IP Address.....	3-2
	NPort 5110 Administration Suite .....	3-2
	ARP .....	3-2
	Telnet Console.....	3-3
	Serial Console (19200, n, 8, 1).....	3-6
<b>Chapter 4</b>	<b>Choosing the Proper Operation Mode .....</b>	<b>4-1</b>
	Overview.....	4-2
	TCP Server Mode.....	4-2
	TCP Client Mode .....	4-2
	UDP Mode .....	4-3
	Real COM Mode .....	4-3
	Pair Connection Mode .....	4-3
	Ethernet Modem Mode .....	4-4
<b>Chapter 5</b>	<b>Web Console Configuration .....</b>	<b>5-1</b>
	Opening Your Browser .....	5-2
	Basic Settings .....	5-4
	Network Settings .....	5-5
	Serial Settings.....	5-8
	Operating Settings.....	5-10
	Real COM Mode .....	5-10
	TCP Server Mode.....	5-12
	TCP Client Mode .....	5-15
	UDP Mode .....	5-18
	Pair Connection Slave Mode.....	5-20
	Pair Connection Master Mode.....	5-21
	Ethernet Modem.....	5-22
	Accessible IP Settings .....	5-25
	Auto Warning Settings.....	5-26
	Auto Warning: E-mail and SNMP Trap .....	5-26
	Event Type .....	5-27
	Change Password .....	5-29
	Load Factory Defaults .....	5-29

<b>Chapter 6</b>	<b>Configuring Windows Administrator.....</b>	<b>6-1</b>
	Overview.....	6-2
	Installing Windows Administrator.....	6-2
	Configuration .....	6-6
	Broadcast Search .....	6-7
	Unlock Password Protection .....	6-10
	Configuring NPort 5110.....	6-12
	Upgrade Firmware.....	6-14
	Export/Import .....	6-15
	Monitor .....	6-16
	Port Monitor .....	6-22
	COM Mapping.....	6-23
	On-line COM Mapping .....	6-23
	Off-line COM Mapping .....	6-29
	IP Location.....	6-30
<b>Chapter 7</b>	<b>IP Serial LIB .....</b>	<b>7-1</b>
	Overview.....	7-2
	IP Serial LIB Function Groups .....	7-3
	Example Program.....	7-3
<b>Appendix A</b>	<b>Pinouts and Cable Wiring.....</b>	<b>A-1</b>
	Port Pinout Diagrams .....	A-2
	Ethernet Port Pinouts.....	A-2
	Serial Port Pinouts .....	A-2
	Cable Wiring Diagrams.....	A-3
	Ethernet Cables .....	A-3
<b>Appendix B</b>	<b>Well Known Port Numbers .....</b>	<b>B-1</b>
<b>Appendix C</b>	<b>SNMP Agents with MIB II &amp; RS-232 Like Groups .....</b>	<b>C-1</b>
<b>Appendix D</b>	<b>Auto IP Report Protocol.....</b>	<b>D-1</b>
<b>Appendix E</b>	<b>Service Information.....</b>	<b>E-1</b>
	MOXA Internet Services .....	E-2
	Problem Report Form .....	E-3
	Product Return Procedure.....	E-4

# Introduction

---

Welcome to NPort 5110, an advanced, 1-port RS-232 serial device server that makes it easy to network-enable your devices.

The following topics are covered in this chapter:

- ☐ **Overview**
- ☐ **Package Checklist**
- ☐ **Product Features**
- ☐ **Product Specifications**

## Overview

NPort 5110 serial device server is designed to make your industrial serial devices Internet ready instantly, and is well-suited for POS security market applications. The compact size of NPort 5110 device server makes them the ideal choice for connecting your RS-232 serial devices, such as card reader, payment terminal, to an IP-based Ethernet LAN, making it possible for your software to access serial devices located anywhere on a local LAN, or the Internet.

NPort 5110 serial device server provides TCP Server, TCP Client, UDP Server/Client, Pair Connection, and Ethernet Modem, ensuring the compatibility of network software that uses a standard network API (Winsock, BSD Sockets). And thanks to NPort's Real COM/TTY drivers, software that works with COM/TTY ports can now work on a TCP/IP network in no time. This excellent feature preserves your software investment and lets you enjoy the benefits of networking your serial devices instantly.

NPort 5110 device servers support automatic IP configuration protocols (DHCP, BOOTP) and manual configuration via the handy web browser console. Both methods ensure quick and effective installation. And with NPort 5110's Windows Utility, installation is very straightforward, since all system parameters can be stored and then copied to other device servers simultaneously.

## Package Checklist

NPort 5110 products are shipped with the following items:

### *Standard Accessories*

- 1 NPort 5110 serial device server
- Quick Installation Guide
- NPort Documentation and Software CD-ROM
- Power Adaptor

### *Optional Accessories*

- DK-35A: DIN-Rail Mounting Kit (35mm)

*NOTE: Notify your sales representative if any of the above items is missing or damaged.*

## Product Features

NPort 5110 has the following features:

- Low cost, credit card size
- Makes your serial devices Internet ready
- Easy wall and DIN-Rail mounting
- Real COM/TTY driver for Windows and Linux
- Fixed TTY driver for SCO OpenServer, SCO Unixware 7, SCO Unixware 2.1
- Versatile socket operation modes, including TCP Server, TCP Client, UDP, and Ethernet Modem modes
- Pair Connection mode for connecting two serial devices over a network without a PC
- Easy-to-use Windows Utility for mass installation
- Auto-detecting 10/100 Mbps Ethernet
- Built-in 15KV ESD protection for all serial signals
- Supports SNMP MIB-II for network management
- Configuration via web/Telnet/serial console
- Configuration utility automatically finds NPort devices on the network

## Product Specifications

### LAN

Ethernet	10/100 Mbps, RJ45
Protection	Built-in 1.5 KV magnetic isolation

### NPort 5110 Serial Interface

Interface	RS-232
No. of Ports	1
Port Type	Male DB9
Signals	TxD, RxD, RTS, CTS, DTR, DSR, DCD, GND
Serial Line Protection	15 KV ESD for all signals

### Power Line Protection

4 KV Burst (EFT), EN61000-4-4

2 KV Surge, EN61000-4-5

### Advanced Built-in Features

Watch Dog Timer

### Serial Communication Parameters

Parity	None, Even, Odd, Space, Mark
Data Bits	5, 6, 7, 8
Stop Bit	1, 1.5, 2
Flow Control	RTS/CTS, XON/XOFF, DTR/DSR
Transmission Speed	110 bps to 230.4 Kbps

### Software Features

Protocols	ICMP, IP, TCP, UDP, DHCP, BOOTP, Telnet, DNS, SNMP, HTTP, SMTP
Utilities	NPort Administrator for Windows 95/98/ME/NT/2000/XP/2003
Real COM/TTY Drivers	Windows 95/98/ME/NT/2000/XP/2003 Real COM driver, Linux real TTY driver, Unix fixed TTY driver
Configuration	Web Browser, Serial/Telnet Console, or Windows Utility

### Power Requirements

Power Input	9 to 30 VDC
Power Consumption	

### Mechanical

Casing	Aluminum case (1 mm)
Dimensions (W × H × D)	50 × 80 × 22 mm (1.97 × 3.15 × 0.87 in)

### Environmental

Operating Temperature	0 to 55°C (32 to 131°F), 5 to 95%RH
Storage Temperature	-20 to 85°C (-4 to 185°F), 5 to 95%RH

### Regulatory Approvals

EMC	FCC Class A, CE Class A
Safety	UL, CUL, TÜV
WARRANTY	5 years

# 2

## Getting Started


---

This chapter includes information about installing NPort 5110. The following topics are covered:

- ❑ **Panel Layout**
- ❑ **Connecting the Hardware**
  - Connecting the Power
  - Connecting to the Network
  - Connecting to a Serial Device
  - LED Indicators



## Panel Layout

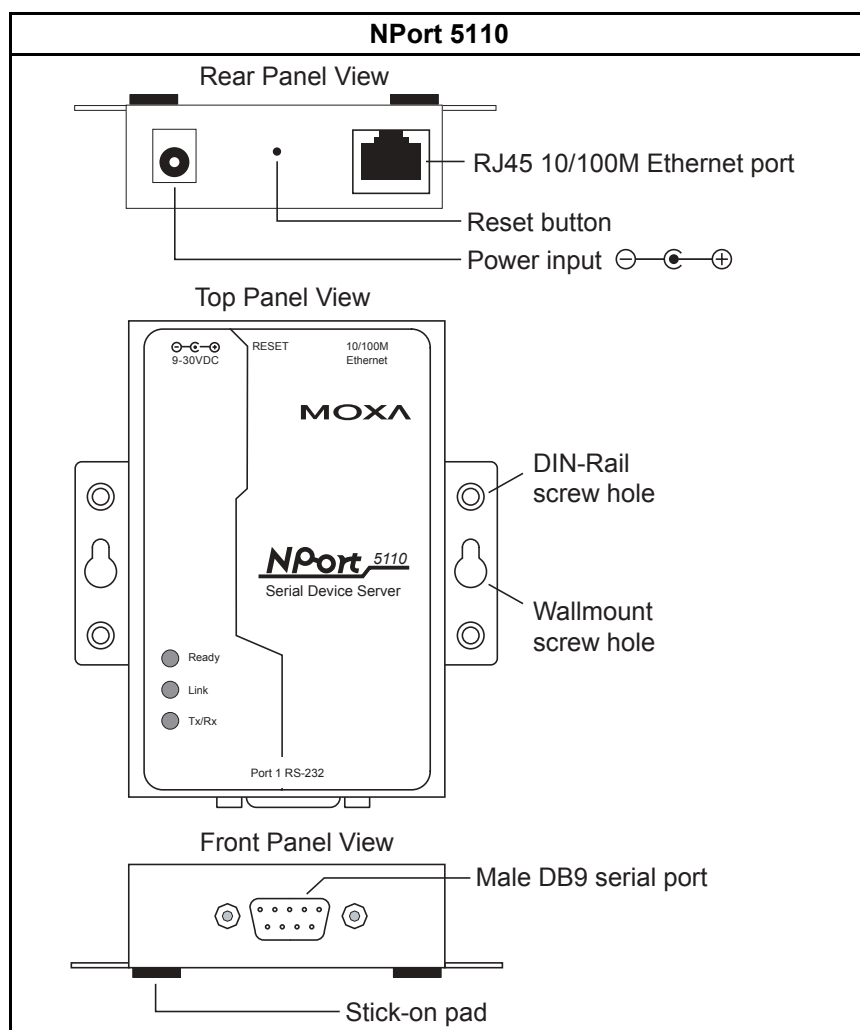

## Connecting the Hardware

This section describes how to connect NPort 5110 to serial devices for first time testing purposes. We cover **Connecting to the Network**, **Connecting to a Serial Device**, and **LED Indicators**.

### Connecting the Power

Connect the 9-30 VDC power cord with NPort 5110's power input. The "Ready" LED will show a solid red color until the system is ready, at which time the "Ready" LED will change to a green color.

## Connecting to the Network

Connect one end of the Ethernet cable to NPort 5110's 10/100M Ethernet port and the other end of the cable to the Ethernet network. NPort 5110 will indicate a valid connection to the Ethernet in the following ways:

- The Ethernet LED maintains a solid green color when connected to a 100 Mbps Ethernet network.
- The Ethernet LED maintains a solid orange color when connected to a 10 Mbps Ethernet network.
- The Ethernet LED will flash when Ethernet packets are being transmitted or received.

## Connecting to a Serial Device

Connect the serial data cable between NPort 5110 and the serial device. NPort 5110's serial port uses the RS-232 interface to transmit data. The port uses a standard male DB9 pin assignment. Refer to Appendix A to see the signal definitions for the port.

## LED Indicators

NPort 5110 has 3 LED indicators, as described in the following table.

LED Name	LED Color	LED Function
Ready	Red	Steady on: Power is on and NPort 5110 is booting up. Blinking: Indicates an IP conflict, or DHCP or BOOTP server did not respond properly.
	Green	Steady on: Power is on and NPort 5110 is functioning normally. Blinking: The device server has been located by Administrator's Location function.
	Off	Power is off, or power error condition exists.
Link	Orange	10 Mbps Ethernet connection.
	Green	100 Mbps Ethernet connection.
	Off	Ethernet cable is disconnected, or has a short.
Tx/Rx	Orange	Serial port is receiving data.
	Green	Serial port is transmitting data.
	Off	No data is being transmitted or received through the serial port.

## Initial IP Address Configuration

---

When setting up your NPort 5110 for the first time, you should first configure the IP address. This chapter introduces the method to configure the device server's IP address. For more details about network settings, see the *Network Settings* section from Chapter 5, *Web Console Configuration*.

This chapter includes the following sections:

- ☐ **Initializing NPort 5110's IP Address**
- ☐ **Factory Default IP Address**
- ☐ **NPort 5110 Administration Suite** ← *recommended configuration method*
- ☐ **ARP**
- ☐ **Telnet Console**
- ☐ **Serial Console (19200, n, 8, 1)**

## Initializing NPort 5110's IP Address

1. Determine whether your NPort 5110 needs to use a Static IP or Dynamic IP (either DHCP or BOOTP application).
2. *If NPort 5110 is used in a Static IP environment*, you can use NPort 5110 Administration Suite, ARP, Web Console, Telnet Console, or Serial Console to configure the new IP address.
3. *If NPort 5110 is used in a Dynamic IP environment*, you can use NPort 5110 Administration Suite, Web Console, Telnet Console, or Serial Console to configure NPort 5110 to get an IP address dynamically with DHCP, DHCP/BOOTP, or BOOTP.



### ATTENTION

Consult your network administrator on how to reserve a fixed IP address for your NPort 5110 in the MAC-IP mapping table when using a DHCP Server or BOOTP Server. In most applications, you should assign a fixed IP address to your NPort 5110.

## Factory Default IP Address

NPort 5110 products are configured with the following default private IP address:

**Default IP address:** 192.168.127.254

(IP addresses of the form 192.168.xxx.xxx are referred to as private IP addresses, since it is not possible to directly access a device configured with a private IP address from a public network. For example, you would not be able to ping such a device from an outside Internet connection. NPort 5110 applications that require sending data over a public network, such as the Internet, require setting up the server with a valid public IP address, which can be leased from a local ISP.)

## NPort 5110 Administration Suite

NPort 5110 Administration Suite consists of some useful utility programs that are used to configure and manage your NPort 5110s.

**See Chapter 5 for details on how to install NPort 5110 Administration Suite, and how to use this suite of useful utilities to set up IP addresses and configure your NPort 5110 serial device servers.**

## ARP

You can make use of the ARP (Address Resolution Protocol) command to set up an IP address for your NPort 5110. The ARP command tells your computer to associate the NPort 5110's MAC address with the intended IP address. You must then use Telnet to access the NPort 5110, at which point the device server's IP address will be reconfigured.



### ATTENTION

In order to use the ARP setup method, both your computer and NPort 5110 must be connected to the same LAN. Or, you may use a cross-over Ethernet cable to connect the NPort 5110 directly to your computer's Ethernet card. Your NPort 5110 must be configured with the factory default IP address—192.168.127.254—before executing the ARP command, as described below.

Take the following steps to use ARP to configure the IP address:

1. Obtain a valid IP address for your NPort 5110 from your network administrator.
2. Obtain NPort 5110's MAC address from the label on its bottom panel.
3. Execute the 'arp -s' command from your computer's MS-DOS prompt by typing:


```
arp -s 192.168.200.100 00-90-E8-xx-xx-xx
```

This is where 192.168.200.100 is the new IP address and 00-90-E8-xx-xx-xx is the MAC address for your NPort 5110. You will need to change both numbers, as described above in items 1 and 2.

4. Next, execute a special Telnet command by typing:

```
telnet 192.168.200.100 6000
```


After issuing this command, a **Connect failed** message will appear, as shown here. After the NPort 5110 reboots, its IP address should be updated to the new address, and you can reconnect using either Telnet, Web, or Administrator to check that the update was successful.

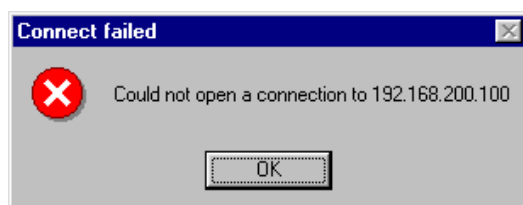


## Telnet Console

Depending on how your computer and network are configured, you may find it convenient to use network access to set up your NPort 5110's IP address. This can be done using Telnet.

1. From the Windows desktop, click on **Start** and then select **Run**.
2. Type **telnet 192.168.127.254** (use the correct IP address if different from the default) in the Open text input box, and then click **OK**.

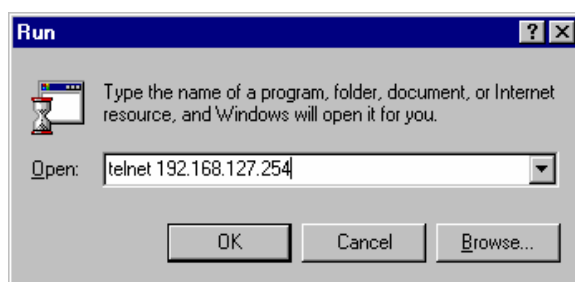

3. When the Telnet window opens, if you are prompted to input the Console password, input the password and then press **Enter**. Note that this page will only appear if the NPort 5110 is password protected.

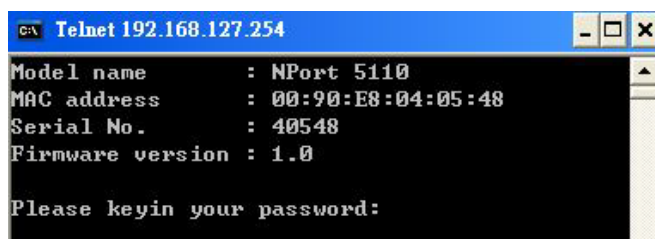

4. Type **2** to select **Network settings**, and then press **Enter**.

```
<< Main menu >>
<1> Basic settings
<2> Network settings
<3> Serial settings
<4> Operating settings
<5> Accessible IP settings
<6> Auto warning settings
<7> Monitor
<8> Ping
<9> Change password
<a> Load factory default
<v> View settings
<s> Save/Restart
<q> Quit

Key in your selection:
```

5. Type **1** to select **IP address** and then press **Enter**.

```
<< Main menu->Network settings >>
<1> IP address
<2> Netmask
<3> Gateway
<4> IP configuration
<5> DNS server 1
<6> DNS server 2
<7> SNMP
<8> SNMP community name
<9> SNMP contact
<a> SNMP location
<b> Auto IP report to IP
<c> Auto IP report to TCP port
<d> Auto IP report period
<v> View settings
<m> Back to main menu
<q> Quit

Key in your selection:
```

6. Use the **Backspace** key to erase the current IP address, type in the new IP address, and then press **Enter**.

```
<< Main menu->Network settings >>
<1> IP address
<2> Netmask
<3> Gateway
<4> IP configuration
<5> DNS server 1
<6> DNS server 2
<7> SNMP
<8> SNMP community name
<9> SNMP contact
<a> SNMP location
<b> Auto IP report to IP
<c> Auto IP report to TCP port
<d> Auto IP report period
<v> View settings
<m> Back to main menu
<q> Quit

Key in your selection: 1
IP address: 192.168.127.253
```

7. Press any key to continue.

```
<< Main menu->Network settings >>
<1> IP address
<2> Netmask
<3> Gateway
<4> IP configuration
<5> DNS server 1
<6> DNS server 2
<7> SNMP
<8> SNMP community name
<9> SNMP contact
<a> SNMP location
<b> Auto IP report to IP
<c> Auto IP report to TCP port
<d> Auto IP report period
<v> View settings
<m> Back to main menu
<q> Quit

Key in your selection: 1
IP address: 192.168.127.253
Set IP address success

Press any key to continue...
```

8. Type **m** and then press **Enter** to return to the main menu.

```
<< Main menu->Network settings >>
<1> IP address
<2> Netmask
<3> Gateway
<4> IP configuration
<5> DNS server 1
<6> DNS server 2
<7> SNMP
<8> SNMP community name
<9> SNMP contact
<a> SNMP location
<b> Auto IP report to IP
<c> Auto IP report to TCP port
<d> Auto IP report period
<v> View settings
<m> Back to main menu
<q> Quit

Key in your selection: m
```

9. Type **s** and then press **Enter** to **Save/Restart** the system.

```
<< Main menu >>
<1> Basic settings
<2> Network settings
<3> Serial settings
<4> Operating settings
<5> Accessible IP settings
<6> Auto warning settings
<7> Monitor
<8> Ping
<9> Change password
<a> Load factory default
<v> View settings
<s> Save/Restart
<q> Quit

Key in your selection: s
```

10. Type **y** and then press **Enter** to save the new IP address and restart NPort 5110.

```
Save change?
<y> Yes
<n> No

Key in your selection: y
```


## Serial Console (19200, n, 8, 1)

You may use the RS-232 console port to set up the IP address for NPort 5110. We suggest using PComm Terminal Emulator, which is available free of charge as part of the PComm Lite program suite (found on the Software CD that comes with the product), to carry out the installation procedure, although other similar utilities may also be used.


Before you start to configure the NPort 5110 via serial console, turn off the power and connect the serial cable from NPort 5110 to your computer's serial port.




1. Connect NPort 5110's serial port 1 directly to your computer's male RS-232 serial port.
2. From the Windows desktop click on **Start → Programs → PComm Lite → Terminal Emulator**.
3. When the **PComm Terminal Emulator** window opens, first click on the **Port Manager** menu item and select **Open**, or simply click on the **Open** icon.

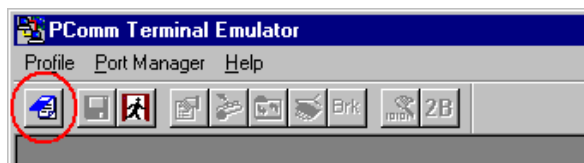

4. The **Property** window opens automatically. From the **Communication Parameter** page, select the appropriate COM port for the connection, **COM1** in this example, and **19200** for **Baud Rate**, **8** for **Data Bits**, **None** for **Parity**, and **1** for **Stop Bits**.

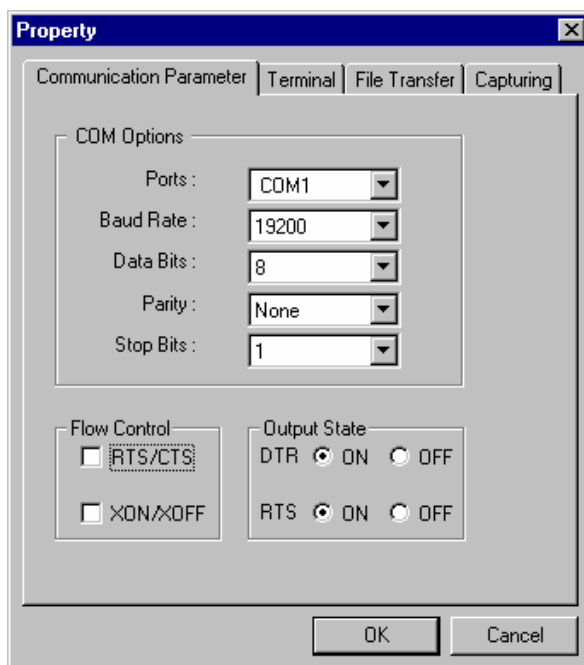


5. From the Property window's **Terminal** page, select **ANSI** or **VT100** for **Terminal Type** and then click **OK**. If you select **Dumb Terminal** as the terminal type, some of the console functions—especially the “Monitor” function—may not work properly.
6. Press the “`” key continuously and then power on the NPort 5110.

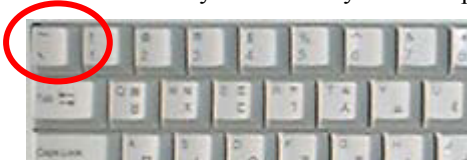

7. NPort 5110 will receive the “`” string continuously and then auto switch from data mode to console mode.

8. Input the password when prompted. Note that this page will only appear when the NPort 5110 has been set up for password protection.

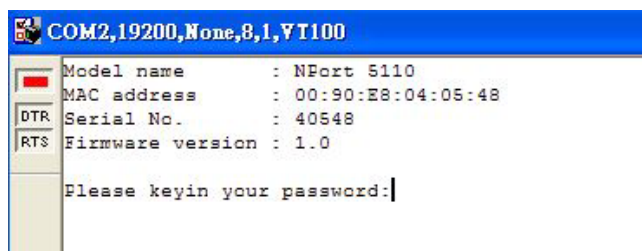


COM2,19200,None,8,1,V1100

Model name	: NPort 5110
MAC address	: 00:90:E8:04:05:48
Serial No.	: 40548
Firmware version	: 1.0

Please keyin your password:|

9. Start configuring the IP address under **Network Settings**. Refer to step 4 in the **Telnet Console** section for instructions on how to configure the rest of the IP settings.

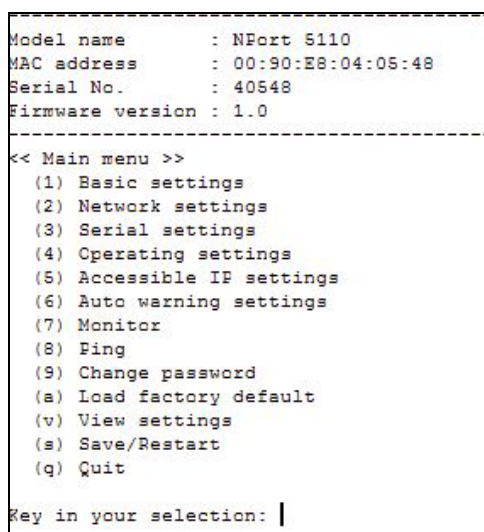

```
Model name      : NPort 5110
MAC address     : 00:90:E8:04:05:48
Serial No.      : 40548
Firmware version : 1.0
-----
<< Main menu >>
(1) Basic settings
(2) Network settings
(3) Serial settings
(4) Operating settings
(5) Accessible IP settings
(6) Auto warning settings
(7) Monitor
(8) Ping
(9) Change password
(a) Load factory default
(v) View settings
(s) Save/Restart
(q) Quit

Key in your selection: |
```

## Choosing the Proper Operation Mode

---

In this section, we describe the various NPort 5110 operation modes. The options include an operation mode that uses a driver installed on the host computer, and operation modes that rely on TCP/IP socket programming concepts. After choosing the proper operation mode in this chapter, refer to Chapter 5 for detailed configuration parameter definitions.

- ☐ **Overview**
- ☐ **TCP Server Mode**
- ☐ **TCP Client Mode**
- ☐ **UDP Mode**
- ☐ **Real COM Mode**
- ☐ **Pair Connection Mode**
- ☐ **Ethernet Modem Mode**

## Overview

NPort 5110 Serial Device Servers are used to network-enable traditional RS-232 devices. A Serial Device Server is a tiny computer equipped with a CPU, real-time OS, and TCP/IP protocols that can bi-directionally transfer data between the serial and Ethernet formats. Your computer can access, manage, and configure remote facilities and equipment over the Internet from anywhere in the world.

Traditional SCADA and data collection systems rely on serial ports (RS-232) to collect data from various kinds of instruments. Since NPort 5110 Serial Device Servers network-enable instruments equipped with an RS-232 communication port, your SCADA and data collection system will be able to access all instruments connected to a standard TCP/IP network, regardless of whether the devices are used locally or at a remote site.

NPort 5110 is an external IP-based network device that allows you to expand the number of serial ports for a host computer on demand. As long as your host computer supports the TCP/IP protocol, you won't be limited by the host computer's bus limitation (such as ISA or PCI), or lack of drivers for various operating systems.

In addition to providing socket access, NPort 5110 also comes with a Real COM/TTY driver that transmits all serial signals intact. This means that your existing COM/TTY-based software can be preserved, without needing to invest in additional software.

Three different Socket Modes are available: TCP Server, TCP Client, and UDP Server/Client. The main difference between the TCP and UDP protocols is that TCP guarantees delivery of data by requiring the recipient to send an acknowledgement to the sender. UDP does not require this type of verification, making it possible to offer speedier delivery. UDP also allows data to be unicast or multicast to only one IP or to different groups of IP addresses.

## TCP Server Mode

In TCP Server mode, NPort 5110 is configured with a unique IP:Port address on a TCP/IP network. NPort 5110 waits passively to be contacted by the host computer, allowing the host computer to establish a connection with and get data from the serial device. This operation mode also supports up to 4 simultaneous connections, so that multiple hosts can collect data from the same serial device—at the same time.

As illustrated in the figure, data transmission proceeds as follows:

1. The host requests a connection from the NPort 5110 configured for TCP Server Mode.
2. Once the connection is established, data can be transmitted in both directions—from the host to the NPort 5110, and from the NPort 5110 to the host.

## TCP Client Mode

In TCP Client mode, NPort 5110 can actively establish a TCP connection to a pre-defined host computer when serial data arrives.

After the data has been transferred, NPort 5110 can automatically disconnect from the host computer by using the TCP alive check time or Inactivity time settings. Refer to Chapter 5 for more details.

Data transmission proceeds as follows:

1. The NPort 5110 configured for TCP Client Mode requests a connection from the host.
2. Once the connection is established, data can be transmitted in both directions—from the host to the NPort 5110, and from the NPort 5110 to the host.

## UDP Mode

Compared to TCP communication, UDP is faster and more efficient. In UDP mode, you can unicast or multicast data from the serial device to one or multiple host computers, and the serial device can also receive data from one or multiple host computers, making this mode ideal for message display applications.

## Real COM Mode

NPort 5110 comes equipped with COM drivers that work with Windows 95/98/ME/NT/2000/XP systems, and also TTY drivers for Linux systems. The driver establishes a transparent connection between host and serial device by mapping the IP:Port of the NPort 5110 port to a local COM port on the host computer. This operation mode also supports up to 4 simultaneous connections, so that multiple hosts can collect data from the same serial device at the same time.



### ATTENTION

The driver used for Real COM Mode is installed automatically on your computer when you install NPort 5110 Administration Suite.

One of the major conveniences of using Real COM Mode is that Real COM Mode allows users to continue using RS-232 serial communications software that was written for pure serial communications applications. The driver intercepts data sent to the host's COM port, packs it into a TCP/IP packet, and then redirects it through the host's Ethernet card. At the other end of the connection, the NPort 5110 accepts the Ethernet frame, unpacks the TCP/IP packet, and then transparently sends it to the appropriate serial device attached to one of the NPort 5110's serial ports.



### ATTENTION

Real COM Mode allows several hosts to have access control of the same NPort 5110. The driver that comes with your NPort 5110 controls host access to attached serial devices by checking the host's IP address. Refer to Accessible IP Settings in Chapter 5 for more details.

## Pair Connection Mode

Pair Connection Mode employs two NPort 5110 device servers in tandem, and can be used to remove the 15-meter distance limitation imposed by the RS-232 interface. One NPort 5110 is connected from its RS-232 port to the COM port of a PC or other type of computer, such as hand-held PDAs that have a serial port, and the serial device is connected to the RS-232 port of the other NPort 5110. The two NPort 5110 are then connected to each other with a cross-over Ethernet cable, both are connected to the same LAN, or in a more advanced setup, they communicate with each other over a WAN (i.e., through one or more routers). Pair Connection Mode transparently transfers both data and modem control signals (although it cannot transmit the DCD signal) between the two NPorts.

## Ethernet Modem Mode

The Ethernet Modem operation mode is designed for use with legacy operating systems, such as MS-DOS, that do not support TCP/IP Ethernet. By connecting one NPort 5110's serial port to the MS-DOS computer's serial port, it is possible to use legacy software originally designed to transmit data via modem, but now transmit the data over the Ethernet.

## Web Console Configuration


---

The Web Console is the most user-friendly method available to configure NPort 5110. This chapter introduces the Web Console function groups and function definitions.


- ☐ **Opening Your Browser**
- ☐ **Basic Settings**
- ☐ **Network Settings**
- ☐ **Serial Settings**
- ☐ **Operating Settings**
  - Real COM Mode
  - TCP Server Mode
  - TCP Client Mode
  - UDP Mode
  - Pair Connection Slave Mode
  - Pair Connection Master Mode
  - Ethernet Modem
- ☐ **Accessible IP Settings**
- ☐ **Auto Warning Settings**
  - Auto Warning: E-mail and SNMP Trap
  - Event Type
- ☐ **Change Password**
- ☐ **Load Factory Defaults**

## Opening Your Browser

1. Open your browser with the cookie function enabled. (To enable your browser for cookies, right click on your desktop Internet Explorer icon, select Properties, click on the Security tab, and then select the three Enable options as shown in the figure below.)

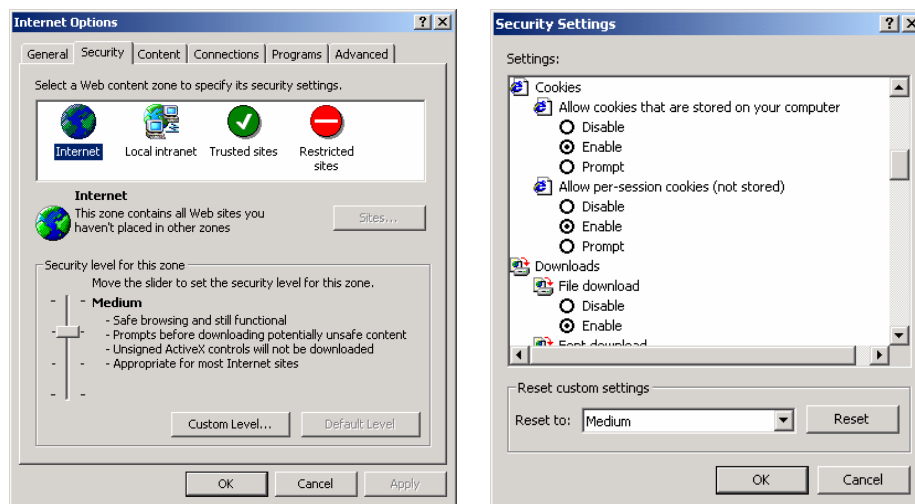

2. Type 192.168.127.254 in the **Address** input box (use the correct IP address if different from the default), and then press **Enter**.

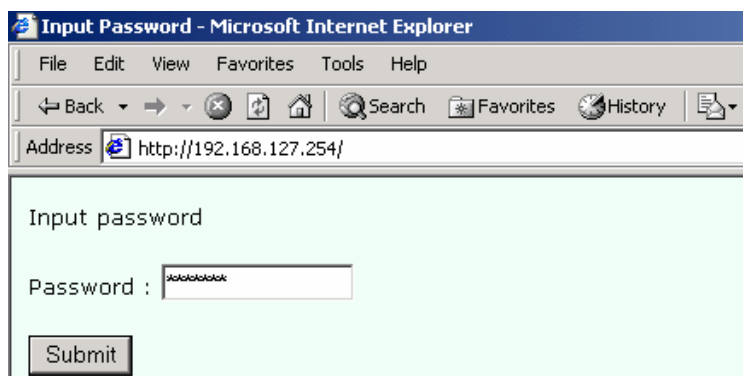

3. Input the password if prompted. The password will be transmitted with MD5 encryption over the Ethernet. Note that you will not be prompted to enter the password if the NPort 5110 is not currently password protected.



### ATTENTION

If you use other web browsers, remember to Enable the functions to “allow cookies that are stored on your computer” or “allow per-session cookies.”

NPort 5110 uses cookies only for “password” transmission.



**ATTENTION**

Refer to Chapter 3, “Initial IP Address Configuration,” to see how to configure the IP address. Examples shown in this chapter use the Factory Default IP address (192.168.127.254).

- The NPort 5110 homepage will open. On this page, you can see a brief description of the Web Console's nine function groups.

Welcome to NPort's web console !	
Model Name	NPort 5110
MAC Address	00:90:E8:04:05:48
Serial No.	40548
Firmware Version	1.0

NPort's web console provide the following function groups.

**Basic Settings**  
Server name, real time clock, time server IP address, and Web console, Telnet console Enable, Disable function.

**Network Settings**  
IP address, netmask, default gateway, static IP or dynamic IP, DNS, SNMP, IP location report.

**Serial Settings**  
Baud rate, start bits, data bits, stop bits, flow control, UART FIFO.

**Operating Settings**  
Operation mode, TCP alive check, inactivity, delimiters, force transmit timeout.

**Accessible IP Settings**  
"Accessible IP or Accessible IP group". Disable to accept all IP's connection.

**ATTENTION**

If you can't remember the password, the **ONLY** way to start configuring NPort 5110 is to load factory defaults by using the Reset button located near the NPort 5110's RJ45 Ethernet port. Remember to use Windows Administrator to export the configuration file when you have finished the configuration. After using the Reset button to load factory defaults, your configuration can be easily reloaded into NPort 5110 by using the Windows Administrator Import function. If your NPort 5110 application requires using password protection, you must enable the cookie function in your browser. If the cookie function is disabled, you will not be allowed to enter the Web Console Screen.

## Basic Settings

### Server name

Setting	Factory Default	Necessity
1 to 39 characters	[model name]_[Serial No.]	Optional

This option is useful for specifying the location or application of different NPort 5110s.

### Web/Telnet Console

The “Disable” option for “Web Console” and “Telnet Console” is included for security reasons. In some cases, you may want to Disable one or both of these console utilities as an extra precaution to prevent unauthorized users from accessing your NPort 5110. The factory default for both Web console and Telnet console is **Enable**.

### Web Console

Setting	Factory Default	Necessity
Enable or Disable	Enable	Required



### ATTENTION

If you disable both the “Web console” and “Telnet console,” you can still use Windows Administrator to configure NPort 5110 either locally or remotely over the network. Refer to Chapter 6 for more details.

## Network Settings

**Network Settings**

IP address: 192.168.127.254

Netmask: 255.255.255.0

Gateway:

IP configuration: Static

DNS server 1:

DNS server 2:

**SNMP Setting**

SNMP: ☒ Enable ☐ Disable

Community name: public

Contact:

Location:

**IP Address report**

Auto report to IP:

Auto report to TCP port: 4002

Auto report period: 10 seconds

Submit

You must assign a valid IP address to NPort 5110 before it will work in your network environment. Your network system administrator should provide you with an IP address and related settings for your network. The IP address must be unique within the network (otherwise, NPort 5110 will not have a valid connection to the network). First time users can refer to Chapter 3, “Initial IP Address Configuration,” for more information.

You can choose from four possible “IP configuration” modes—**Static**, **DHCP**, **DHCP/BOOTP**, and **BOOTP**—located under the web console screen’s IP configuration drop-down box.

### IP configuration

Method	Function Definition
Static	User defined IP address, Netmask, Gateway.
DHCP	DHCP Server assigned IP address, Netmask, Gateway, DNS, and Time Server
DHCP/BOOTP	DHCP Server assigned IP address, Netmask, Gateway, DNS, and Time Server, or BOOTP Server assigned IP address (if the DHCP Server does not respond)
BOOTP	BOOTP Server assigns IP address

**IP address**

Setting	Factory Default	Necessity
E.g., 192.168.1.1 (IP addresses of the form <i>x.x.x.0</i> and <i>x.x.x.255</i> are invalid.)	192.168.127.254	Required

An IP address is a number assigned to a network device (such as a computer) as a permanent address on the network. Computers use the IP address to identify and talk to each other over the network. Choose a proper IP address which is unique and valid in your network environment.

**Netmask**

Setting	Factory Default	Necessity
E.g., 255.255.255.0	255.255.255.0	Required

A subnet mask represents all of the network hosts at one geographic location, in one building, or on the same local area network. When a packet is sent out over the network, the NPort 5110 will use the subnet mask to check whether the desired TCP/IP host specified in the packet is on the local network segment. If the address is on the same network segment as the NPort 5110, a connection is established directly from the NPort 5110. Otherwise, the connection is established through the given default gateway.

**Gateway**

Setting	Factory Default	Necessity
E.g., 192.168.1.1	None	Optional

A gateway is a network gateway that acts as an entrance to another network. Usually, the computers that control traffic within the network or at the local Internet service provider are gateway nodes. NPort 5110 needs to know the IP address of the default gateway computer in order to communicate with the hosts outside the local network environment. For correct gateway IP address information, consult the network administrator.

**IP configuration**

Setting	Factory Default	Necessity
Static DHCP DHCP/BOOTP BOOTP	Static	Required

**ATTENTION**

In Dynamic IP environments, the firmware will retry 3 times every 30 seconds until network settings are assigned by the DHCP or BOOTP server. The Timeout for each try increases from 1 second, to 3 seconds, to 5 seconds. If the DHCP/BOOTP Server is unavailable, the firmware will use the default IP address (192.168.127.254), Netmask, and Gateway for IP settings.

**DNS server 1 / DNS server 2**

Setting	Factory Default	Necessity
E.g., 192.168.1.1 (IP addresses of the form <i>x.x.x.0</i> and <i>x.x.x.255</i> are invalid.)	None	Optional

When the user wants to visit a particular website, the computer asks a Domain Name System (DNS) server for the website's correct IP address, and then the computer uses the response to

connect to the web server. DNS is the way that Internet domain names are identified and translated into IP addresses. A domain name is an alphanumeric name, such as moxa.com, that it is usually easier to remember. A DNS server is a host that translates this kind of text-based domain name into the numeric IP address used to establish a TCP/IP connection.

In order to use NPort 5110's DNS feature, you need to configure the DNS server. Doing so allows NPort 5110 to use a host's domain name to access the host. NPort 5110 provides **DNS server 1** and **DNS server 2** configuration items to configure the IP address of the DNS server. DNS Server 2 is included for use when DNS server 1 is unavailable.

NPort 5110 plays the role of DNS client, in the sense that the NPort 5110 will actively query the DNS server for the IP address associated with a particular domain name. NPort 5110 functions that support domain name are **Time server**, **Destination IP Address in TCP Client mode**, **Mail Server**, **SNMP trap server**, and **Auto report to IP**.

## SNMP Settings

### *Community name*

Setting	Factory Default	Necessity
1 to 39 characters (E.g., Support, 886-89191230 #300)	public	Optional

A community name is a plain-text password mechanism that is used to weakly authenticate queries to agents of managed network devices.

### *Contact*

Setting	Factory Default	Necessity
1 to 39 characters (E.g., Support, 886-89191230 #300)	None	Optional

The SNMP contact information usually includes an emergency contact name and telephone or pager number.

### *Location*

Setting	Factory Default	Necessity
1 to 39 characters (E.g., Floor 1, office 2)	None	Optional

Specify the location string for SNMP agents such as NPort 5110. This string is usually set to the street address where the NPort 5110 is physically located.

## IP Address Report

When NPort 5110 products are used in a dynamic IP environment, users must spend more time with IP management tasks. For example, if NPort 5110 works as a server (TCP or UDP), then the host, which acts as a client, must know the IP address of the server. If the DHCP server assigns a new IP address to NPort 5110, the host must have some way of determining NPort 5110's new IP address.

NPort 5110 products help out by periodically reporting their IP address to the IP location server, in case the dynamic IP has changed. The parameters shown below are used to configure the Auto IP report function. There are two ways to develop an "Auto IP report Server" to receive NPort 5110's Auto IP report.

1. Use Device Server Administrator's IP Address Report function.
2. "Auto IP report protocol", which can automatically receive the Auto IP report on a regular basis, is also available to help you develop your own software. Refer to Appendix E for the "Auto IP report protocol".

*Auto report to IP*

Setting	Factory Default	Necessity
E.g., 192.168.1.1 or URL (IP addresses of the form x.x.x.0 and x.x.x.255 are invalid.)	None	Optional

Reports generated by the Auto report function will be automatically sent to this IP address.

*Auto report to TCP port*

Setting	Factory Default	Necessity
E.g., 4001	4002	Optional

*Auto report period*

Setting	Factory Default	Necessity
Time interval (in seconds)	10	Optional

## Serial Settings

Click on **Serial Settings**, located under **Main Menu**, to display serial port settings for port 1.

Serial Settings								
	Alias	Baud rate	Data bits	Stop bits	Parity	FIFO	Flow ctrl	Interface
Port 1		115200	8	1	None	Enable	RTS/CTS	RS-232

To modify serial settings for a particular port, click on either **Port 1** under **Serial Settings**, located under **Main Menu** on the left side of the browser window.

Main Menu

- Overview
- Basic Settings
- Network Settings
- Serial Settings
  - Port 1
- Operating Settings
  - Port 1
- Accessible IP Settings
- Auto Warning Settings
- Change Password
- Load Factory Default
- Save/Restart

### Serial Settings

**Port=01**

Port alias:

#### Serial Parameters

Baud rate: 115200

Data bits: 8

Stop bits: 1

Parity: None

Flow control: RTS/CTS

FIFO: ☐ Disable ☒ Enable

Interface: RS-232 Only

*Port alias*

Setting	Factory Default	Necessity
1 to 15 characters (E.g., PLC-No.1)	None	Optional

“Port alias” is included to allow easy identification of the serial devices that are connected to NPort 5110's serial port.

**Serial Parameters****ATTENTION**

Check the serial communication parameters in your Serial Device's user's manual. You should set up NPort 5110's serial parameters with the same communication parameters used by your serial devices.

*Baud rate*

Setting	Factory Default	Necessity
110 bps to 230.4 Kbps	115.2 Kbps	Required

*Data bits*

Setting	Factory Default	Necessity
5, 6, 7, 8	8	Required

When the user sets Data bits to 5 bits, the Stop bits setting will automatically change to 1.5 bits.

*Stop bits*

Setting	Factory Default	Necessity
1, 1.5, 2	1	Required

Stop bits will be set to 1.5 when Data bits is set to 5 bits.

*Parity*

Setting	Factory Default	Necessity
None, Even, Odd, Space, Mark	None	Required

*Flow control*

Setting	Factory Default	Necessity
None, RTS/CTS, DTR/DSR, Xon/Xoff	RTS/CTS	Required

*FIFO*

Setting	Factory Default	Necessity
Enable, Disable	Enable	Required

NPort 5110's serial ports provide a 16-byte FIFO both in the Tx and Rx directions. To prevent data loss during communication, disable the FIFO setting when your serial device does not have a FIFO.

*Interface*

Model	Port	Settings	Factory Default	Necessity
NPort 5110	1	RS-232	RS-232	Required



## Operating Settings

Click on **Operating Settings**, located under **Main Menu**, to display the operating settings for both of NPort 5110's serial ports.

### Real COM Mode

#### *TCP alive check time*

Setting	Factory Default	Necessity
0 to 99 min	7 min	Optional

0 min: TCP connection is not closed due to an idle TCP connection.

1 to 99 min: NPort 5110 automatically closes the TCP connection if there is no TCP activity for the given time. After the connection is closed, NPort 5110 starts listening for another Real COM driver connection from another host.

#### *Max connection*

Setting	Factory Default	Necessity
1, 2, 3, 4	1	Required

**Max connection** is usually used when the user needs to receive data from different hosts simultaneously. The factory default is 1. In this case, only one specific host can access this port of the NPort 5110, and the Real COM driver on that host will have full control over the port.

#### *Max. connection 1:*

Allows only 1 host's Real COM driver to open the specific NPort 5110 serial port.



**Max connection 2 to 4:**

Allows 2 to 4 host's Real COM drivers to open the specific NPort 5110 serial port, at the same time. When multiple hosts' Real COM drivers open the serial port at the same time, the COM driver only provides a pure data tunnel without control ability. That is, this serial port parameter will use firmware's settings, not depend on your application program (AP).

Application software that is based on the COM driver will receive a driver response of "success" when the software uses any of the Win32 API functions. The firmware will only send the data back to the driver on the host.

Data will be sent first-in-first-out when data comes into the NPort 5110 from the Ethernet interface.

**ATTENTION**

When Max connection is set to 2, 3, or 4, this means that NPort 5110 will be using a "multi connection application" (i.e., 2, 3, or 4 hosts are allowed access to the port at the same time). When using a multi connection application, NPort 5110 will use the serial communication parameters set in the console. All of the hosts connected to that port must use the same serial settings. If one of the hosts opens the COM port with parameters that are different from NPort 5110's console setting, data communication may not work properly.

**Delimiter 1**

Setting	Factory Default	Necessity
00 to FF (hex)	None	Optional

**Delimiter 2**

Setting	Factory Default	Necessity
00 to FF (hex)	None	Optional

Once the NPort 5110 receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it to the NPort 5110's Ethernet port.

**ATTENTION**

Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1 KB, the NPort 5110 will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.

**Force transmit**

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0: Disable the force transmit timeout.

1 to 65535: Forces the NPort 5110's TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.

This parameter defines the time interval during which NPort 5110 fetches the serial data from its internal buffer. If data is incoming through the serial port, NPort 5110 stores the data in the internal buffer. NPort 5110 transmits data stored in the buffer via TCP/IP, but only if the internal

buffer is full or if the Force transmit time interval reaches the time specified under Force transmit timeout.

The optimal Force transmit timeout depends on your application, but it must be at least larger than one character interval within the specified baud rate. For example, assume that the serial port is set to 1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits needed to send a character is 10 bits, and the time required to transfer one character is

$$(10 \text{ (bits)} / 1200 \text{ (bits/s)}) * 1000 \text{ (ms/s)} = 8.3 \text{ ms.}$$

Therefore, you should set Force transmit timeout to be larger than 8.3 ms, so in this case, it must be greater than or equal to 10 ms.

If the user wants to send a series of characters in the same packet, the serial device attached to NPort 5110 should send that series of characters during a time interval less than the Force transmit timeout for NPort 5110, and the total length of data must be less than or equal to NPort 5110's internal buffer size. The serial communication buffer size for NPort 5110 is 1 KB per port.

## TCP Server Mode

### *TCP alive check time*

Setting	Factory Default	Necessity
0 to 99 min	7 min	Optional

0 min: TCP connection is not closed due to an idle TCP connection.

1 to 99 min: NPort 5110 automatically closes the TCP connection if there is no TCP activity for the given time. After the connection is closed, NPort 5110 starts listening for another host's TCP connection.

### *Inactivity time*

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0 ms: TCP connection is not closed due to an idle serial line.

0-65535 ms: NPort 5110 automatically closes the TCP connection if there is no serial data activity

for the given time. After the connection is closed, NPort 5110 starts listening for another host's TCP connection.

This parameter defines the maintenance status as Closed or Listen for the TCP connection. The connection is closed if there is no incoming or outgoing data through the serial port during the specific Inactivity time.

If the Inactivity time is set to 0, the current TCP connection is kept active until a connection close request is received. Although Inactivity time is disabled, the NPort 5110 will check the connection status between the NPort 5110 and remote host by sending "keep alive" packets periodically. If the remote host does not respond to the packet, NPort 5110 assumes that the connection was closed down unintentionally. NPort 5110 will then force the existing TCP connection to close.



### ATTENTION

The Inactivity time should at least be set larger than that of Force transmit timeout. To prevent the unintended loss of data due to the session being disconnected, it is highly recommended that this value is set large enough so that the intended data transfer is completed.

#### Max connection

Setting	Factory Default	Necessity
1, 2, 3, 4	1	Required

**Max connection** is usually used when the user needs to receive data from different hosts simultaneously. The factory default only allows 1 connection at a time.

#### Max. Connection 1:

NPort 5110 only allows 1 host to open the TCP connection to the specific serial port.

#### Max Connection 2 to 4:

Allows 2 to 4 host's TCP connection request to open this NPort 5110 serial port, at the same time. When multiple hosts establish a TCP connection to the specific serial port at the same time, NPort 5110 will duplicate the serial data and transmit to all of the hosts. Ethernet data is sent on a first-in-first-out basis to the serial port when data comes into NPort 5110 from the Ethernet interface.

#### Delimiter 1

Setting	Factory Default	Necessity
00 to FF	None	Optional

#### Delimiter 2

Setting	Factory Default	Necessity
00 to FF	None	Optional

Once the NPort 5110 receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it out the NPort 5110's Ethernet port.



### ATTENTION

Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1 KB, the NPort 5110 will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.

**Force transmit**

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0: Disable the force transmit timeout.

1 to 65535: Forces the NPort 5110's TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.

This parameter defines the time interval during which NPort 5110 fetches the serial data from its internal buffer. If data is incoming through the serial port, NPort 5110 stores the data in the internal buffer. NPort 5110 transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the Force transmit time interval reaches the time specified under Force transmit timeout.

The optimal Force transmit timeout depends on your application, but it must be at least larger than one character interval within the specified baud rate. For example, assume that the serial port is set to 1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits needed to send a character is 10 bits, and the time required to transfer one character is

$$(10 \text{ (bits)} / 1200 \text{ (bits/s)}) * 1000 \text{ (ms/s)} = 8.3 \text{ ms.}$$

Therefore, you should set Force transmit timeout to be larger than 8.3 ms, so in this case, it must be greater than or equal to 10 ms.

If the user wants to send a series of characters in the same packet, the serial device attached to NPort 5110 should send that series of characters during a time interval less than the Force transmit timeout for NPort 5110, and the total length of data must be less than or equal to NPort 5110's internal buffer size. The serial communication buffer size for NPort 5110 is 1 KB per port.

**Local TCP port**

Setting	Factory Default	Necessity
1 to 65535	4001	Required

The "Local TCP port" is the TCP port that NPort 5110 uses to listen to connections, and that other devices must use to contact NPort 5110. To avoid conflicts with well known TCP ports, the default is set to 4001.

**Command port**

Setting	Factory Default	Necessity
1 to 65535	966	Optional

The "Command port" is a listen TCP port for IP-Serial Lib commands from the host. In order to prevent a TCP port conflict with other applications, the user can set the Command port to another port if needed. IP-Serial Lib will automatically check the Command Port on NPort 5110 so that the user does not need to configure the program.

## TCP Client Mode

***TCP alive check time***

Setting	Factory Default	Necessity
0 to 99 min	7 min	Optional

0 min: TCP connection is not closed due to an idle TCP connection.

1 to 99 min: NPort 5110 automatically closes the TCP connection if there is no TCP activity for the given time.

***Inactivity time***

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0 ms: TCP connection is not closed due to an idle serial line.

0-65535 ms: NPort 5110 automatically closes the TCP connection if there is no serial data activity for the given time.

This parameter defines the maintenance status as Closed or Listen for the TCP connection. The connection is closed if there is no incoming or outgoing data through the serial port during the specific Inactivity time.

If the Inactivity time is set to 0, the current TCP connection is kept active until a connection close request is received. Although Inactivity time is disabled, the NPort 5110 will check the connection status between the NPort 5110 and remote host by sending “keep alive” packets periodically. If the remote host does not respond to the packet, NPort 5110 assumes that the connection was closed down unintentionally. NPort 5110 will then force the existing TCP connection to close.

**ATTENTION**

The Inactivity time should at least be set larger than that of Force transmit timeout. To prevent the unintended loss of data due to the session being disconnected, it is highly recommended that this value is set large enough so that the intended data transfer is completed.

**ATTENTION**

Inactivity time is **ONLY** active when “TCP connect on” is set to “Any character.”

***Delimiter 1***

Setting	Factory Default	Necessity
00 to FF (hex)	None	Optional

***Delimiter 2***

Setting	Factory Default	Necessity
00 to FF (hex)	None	Optional

Once the NPort 5110 receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it to the NPort 5110's Ethernet port.

**ATTENTION**

Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1 KB, the NPort 5110 will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.

***Force transmit***

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0: Disable the force transmit timeout.

1 to 65535: Forces the NPort 5110's TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.

This parameter defines the time interval during which NPort 5110 fetches the serial data from its internal buffer. If data is incoming through the serial port, NPort 5110 stores the data in the internal buffer. NPort 5110 transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the Force transmit time interval reaches the time specified under Force transmit timeout.

The optimal Force transmit timeout depends on your application, but it must be at least larger than one character interval within the specified baud rate. For example, assume that the serial port is set to 1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits needed to send a character is 10 bits, and the time required to transfer one character is

$(10 \text{ (bits)} / 1200 \text{ (bits/s)}) * 1000 \text{ (ms/s)} = 8.3 \text{ ms.}$

Therefore, you should set Force transmit timeout to be larger than 8.3 ms, so in this case, it must be greater than or equal to 10 ms.

If the user wants to send a series of characters in the same packet, the serial device attached to NPort 5110 should send that series of characters during a time interval less than the Force transmit timeout for NPort 5110, and the total length of data must be less than or equal to NPort 5110's internal buffer size. The serial communication buffer size for NPort 5110 is 1 KB per port.

#### ***Destination IP address 1***

Setting	Factory Default	Necessity
IP address or Domain Name (E.g., 192.168.1.1)	None	Required

Allows NPort 5110 to connect actively to the remote host whose IP address is set by this parameter.

#### ***Destination IP address 2/3/4***

Setting	Factory Default	Necessity
IP address or Domain Name (E.g., 192.168.1.1)	None	Required

Allows NPort 5110 to connect actively to the remote host whose IP address is set by this parameter.



#### **ATTENTION**

Up to 4 connections can be established between NPort 5110 and hosts. The connection speed or throughput may be low if one of the four connections is slow, since the 1 slow connection will slow down the other 3 connections.



#### **ATTENTION**

The "Destination IP address" parameter can use both IP address and Domain Name. For some applications, the user may need to send the data actively to the remote destination domain name

#### ***TCP connect on***

Setting	Factory Default	Necessity
Start up, Any character	Start up	Required

Start up: Attempts to establish a TCP connection as soon as the NPort 5110 is powered on.

Any Character: Attempts to establish a TCP connection as soon as the NPort 5110 starts receiving serial data.

## UDP Mode

**Delimiter 1**

Setting	Factory Default	Necessity
00 to FF	None	Optional

**Delimiter 2**

Setting	Factory Default	Necessity
00 to FF	None	Optional

Once the NPort 5110 receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it out the NPort 5110's Ethernet port.

**ATTENTION**

Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1 KB, the NPort 5110 will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.

**Force transmit**

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0: Disable the force transmit timeout.

1 to 65535: Forces the NPort 5110's TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.

This parameter defines the time interval during which NPort 5110 fetches the serial data from its internal buffer. If data is incoming through the serial port, NPort 5110 stores the data in the



internal buffer. NPort 5110 transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the Force transmit time interval reaches the time specified under Force transmit timeout.

The optimal Force transmit timeout depends on your application, but it must be at least larger than one character interval within the specified baud rate. For example, assume that the serial port is set to 1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits needed to send a character is 10 bits, and the time required to transfer one character is

$$(10 \text{ (bits)} / 1200 \text{ (bits/s)}) * 1000 \text{ (ms/s)} = 8.3 \text{ ms.}$$

Therefore, you should set Force transmit timeout to be larger than 8.3 ms, so in this case, it must be greater than or equal to 10 ms.

If the user wants to send a series of characters in the same packet, the serial device attached to NPort 5110 should send that series of characters during a time interval less than the Force transmit timeout for NPort 5110, and the total length of data must be less than or equal to NPort 5110's internal buffer size. The serial communication buffer size for NPort 5110 is 1 KB per port.

#### ***Destination IP address 1***

Setting	Factory Default	Necessity
IP address range E.g.,      Begin: 192.168.1.1 End: 192.168.1.10	Begin:    Empty	Required
	End:      Empty	
	Port:     4001	

#### ***Destination IP address 2/3/4***

Setting	Factory Default	Necessity
IP address range E.g.,      Begin: 192.168.1.11 End: 192.168.1.20	Begin:    Empty	Optional
	End:      Empty	
	Port:     4001	

#### ***Local listen port***

Setting	Factory Default	Necessity
1 to 65535	4001	Required

The UDP port that NPort 5110 listens to, and that other devices must use to contact NPort 5110. To avoid conflicts with well known UDP ports, the default is set to 4001.

## Pair Connection Slave Mode

**Operating Settings**

Port=01

Operation mode: Pair Connection Slave Mode

TCP alive check time: 7 (0 - 99 min)

Local TCP port: 4001

Submit

***TCP alive check time***

Setting	Factory Default	Necessity
0 to 99 min	7 min	Optional

0 min: TCP connection is not closed due to an idle TCP connection.

1 to 99 min: NPort 5110 automatically closes the TCP connection if there is no TCP activity for the given time.

***Local TCP port***

Setting	Factory Default	Necessity
1 to 65535	4001	Required

The "Local TCP port" is the TCP port that NPort 5110 uses to listen to connections, and that other devices must use to contact NPort 5110. To avoid conflicts with well known TCP ports, the default is set to 4001.

## Pair Connection Master Mode

### *TCP alive check time*

Setting	Factory Default	Necessity
0 to 99 min	7 min	Optional

0 min: TCP connection is not closed due to an idle TCP connection.

1 to 99 min: NPort 5110 automatically closes the TCP connection if there is no TCP activity for the given time.

### *Destination IP address*

Setting	Factory Default	Necessity
IP address or Domain Name (E.g., 192.168.1.1)	None	Required

## Ethernet Modem

The screenshot shows the 'Operating Settings' page for the Ethernet Modem. On the left is a navigation menu with the following items: Main Menu, Overview, Basic Settings, Network Settings, Serial Settings (expanded), Port 1 (expanded), Operating Settings (selected), Port 1 (expanded), Accessible IP Settings, Auto Warning Settings, Change Password, Load Factory Default, and Save/Restart. The main content area is titled 'Operating Settings' and has a green background. It includes a 'Port=01' label in the top right. The settings are as follows:

Port=01	
Operation mode	Ethernet Modem Mode
TCP alive check time	7 (0 - 99 min)
Local TCP Port	4001

A 'Submit' button is located at the bottom right of the settings area.

### Dial-in

NPort 5110 listens for a TCP/IP connection request from the remote Ethernet modem or host. NPort 5110's response depends on the ATSO value, as outlined below.

*ATSO=0 (default):*

*NPort 5110 will temporarily accept the TCP connection and then send the "RING" signal out through the serial port. The serial controller must reply with "ATA" within 2.5 seconds to accept the connection request, after which NPort 5110 enters data mode. If no "ATA" command is received, NPort 5110 will disconnect after sending three "RING" signals.*

*ATSO ≥ 1:*

*NPort 5110 will accept the TCP connection immediately and then send the "CONNECT <baud>" command to the serial port, in which <baud> represents the baud rate of NPort 5110's serial port. After that, NPort 5110 immediately enters data mode.*

### Dial-out

NPort 5110 accepts the AT command "ATD <IP>:<TCP port>" from the serial port and then requests a TCP connection from the remote Ethernet Modem or PC. This is where <IP> is the IP address of the remote Ethernet modem or PC, and <TCP port> is the TCP port number of the remote Ethernet modem or PC. Once the remote unit accepts this TCP connection, NPort 5110 will send out the "CONNECT <baud>" signal via the serial port and then enter data mode.

### Disconnection request from local site

When NPort 5110s is in data mode, the user can drive the DTR signal to OFF, or send "+++" from the local serial port to NPort 5110. NPort 5110 will enter command mode and return "NO CARRIER" via the serial port, and then input "ATH" to shut down the TCP connection after 1 second.

#### NOTE

*The "+++" command cannot be divided. The "+" character can be changed in register S2, and the guard time, which prefixes and suffixes the "+++" in order to protect the raw data, can be changed in register S12.*

### Disconnection request from remote site

After the TCP connection has been shut down by the remote Ethernet modem or PC, NPort 5110 will send the "NO CARRIER" signal via the serial port and then return to command mode.

Ethernet Modem			
Setting	Value	Notes	Necessity
TCP port	valid port No.	The TCP port that other devices must use to contact this device. To avoid conflicts with standard TCP ports, the default is set to 4001.	Required
TCP alive check time	0	TCP connection is not closed due to an idle serial line.	Optional
	1 – 99 min.	TCP connection is automatically closed by this device if there is no TCP activity for the given time.	

### AT Commands

NPort 5110 supports the following common AT commands used with a typical modem:

No.	AT command	Description	Remarks
1	ATA	Answer manually	
2	ATD <IP>:<Port>	Dial up the IP address : Port No.	
3	ATE	ATE0=Echo OFF ATE1=Echo ON (default)	
4	ATH	ATH0=On-hook (default) ATH1=Off-hook	
5	ATI, ATI0, ATI1, ATI2	Modem version	reply "OK" only
6	ATL	Speaker volume option	reply "OK" only
7	ATM	Speaker control option	reply "OK" only
8	ATO	On line command	
9	ATP, ATT	Set Pulse/Tone Dialing mode	reply "OK" only
10	ATQ0, ATQ1	Quiet command (default=ATQ0)	
11	ATSr=n	Change the contents of S register	See "S registers"
12	ATSr?	Read the contents of S register	See "S registers"
13	ATV	Result code type ATV0 for digit code, ATV1 for text code 0=OK 1=connect (default) 2=ring 3=No carrier 4=error	
14	ATZ	Reset (disconnect, enter command mode and restore the flash settings)	
15	AT&C	Serial port DCD control AT&C0=DCD always on AT&C1=DTE detects connection by DCD on/off (default)	

16	AT&D	Serial port DTR control AT&D0=recognize DTE always ready AT&D1, AT&D2=reply DTE when DTR On (default)	
17	AT&F	Restore manufacturer's settings	
18	AT&G	Select guard time	reply "OK" only
19	AT&R	Serial port RTS option command	reply "OK" only
20	AT&S	Serial port DSR control	reply "OK" only
21	AT&V	View settings	
22	AT&W	Write current settings to flash for next boot up	

### S Registers

No.	S Register	Description & default value	Remarks
1	S0	Ring to auto-answer (default=0)	
2	S1	Ring counter (always=0)	no action applied
3	S2	Escape code character (default=43 ASCII "+")	
4	S3	Return character (default=13 ASCII)	
5	S4	Line feed character (default=10 ASCII)	
6	S5	Backspace character (default= 8 ASCII)	
7	S6	Wait time for dial tone (always=2, unit=sec)	no action applied
8	S7	Wait time for carrier (default=3, unit=sec)	
9	S8	Pause time for dial delay (always=2, unit=sec)	no action applied
10	S9	Carrier detect response time (always=6, unit 1/10 sec)	no action applied
11	S10	Delay for hang up after carrier (always=14, unit 1/10 sec)	no action applied
12	S11	DTMF duration and spacing (always=100 ms)	no action applied
13	S12	Escape code guard time (default=50, unit 1/50 sec) to control the idle time for "+++"	

**TCP port**

Setting	Factory Default	Necessity
1 to 65535	4001	Required

The TCP port that other devices must use to contact this device. To avoid conflicts with standard TCP ports, the default is set to 4001.

**TCP alive check time**

Setting	Factory Default	Necessity
0 to 99 min	7 min	Optional

0 min: TCP connection is not closed due to an idle TCP connection.

1 to 99 min: NPort 5110 automatically closes the TCP connection if there is no TCP activity for the given time.

## Accessible IP Settings

**Accessible IP Settings**

☐ Enable the accessible IP list ( "Disable" will allow all IP's connection request.)

No.	Active the rule	IP Address	Netmask
1	<input type="checkbox"/>		
2	<input type="checkbox"/>		
3	<input type="checkbox"/>		
4	<input type="checkbox"/>		
5	<input type="checkbox"/>		
6	<input type="checkbox"/>		
7	<input type="checkbox"/>		
8	<input type="checkbox"/>		
9	<input type="checkbox"/>		
10	<input type="checkbox"/>		
11	<input type="checkbox"/>		
12	<input type="checkbox"/>		
13	<input type="checkbox"/>		

NPort 5110 uses an IP address based filtering method to control access to itself.

Accessible IP Settings allows you to add or block remote host IP addresses to prevent unauthorized access. Access to NPort 5110 is controlled by IP address. That is, if a host's IP address is in the accessible IP table, then the host will be allowed to access the NPort 5110. You can allow one of the following cases by setting the parameter.

- **Only one host with a specific IP address can access the NPort 5110**  
Enter "IP address/255.255.255.255" (e.g., "192.168.1.1/255.255.255.255").
- **Hosts on a specific subnet can access the NPort 5110**  
Enter "IP address/255.255.255.0" (e.g., "192.168.1.0/255.255.255.0").

- Any host can access the NPort 5110

Disable this function by un-checking the “Enable the accessible IP list” checkbox. Refer to the following table for more configuration examples.

Allowable Hosts	Input format
Any host	Disable
192.168.1.120	192.168.1.120 / 255.255.255.255
192.168.1.1 to 192.168.1.254	192.168.1.0 / 255.255.255.0
192.168.0.1 to 192.168.255.254	192.168.0.0 / 255.255.0.0
192.168.1.1 to 192.168.1.126	192.168.1.0 / 255.255.255.128
192.168.1.129 to 192.168.1.254	192.168.1.128 / 255.255.255.128

## Auto Warning Settings

### Auto Warning: E-mail and SNMP Trap

### Mail Server

#### Mail server

Setting	Factory Default	Necessity
IP Address or Domain Name	None	Optional

#### User name

Setting	Factory Default	Necessity
1 to 15 characters	None	Optional

#### Password

Setting	Factory Default	Necessity
1 to 15 characters	None	Optional



*From E-mail address*

Setting	Factory Default	Necessity
1 to 63 characters	None	Optional

*E-mail address 1/2/3/4*

Setting	Factory Default	Necessity
1 to 63 characters	None	Optional

**ATTENTION**

Consult your Network Administrator or ISP for the proper mail server settings. The Auto warning function may not work properly if it is not configured correctly. NPort 5110 SMTP AUTH supports LOGIN, PLAIN, CRAM-MD5 (RFC 2554).

**SNMP Trap Server***SNMP trap server IP or domain name*

Setting	Factory Default	Necessity
IP address or Domain Name	None	Optional

**Event Type**

Event Type		
Cold start	<input type="checkbox"/> Mail	<input type="checkbox"/> Trap
Warm start	<input type="checkbox"/> Mail	<input type="checkbox"/> Trap
Authentication failure	<input type="checkbox"/> Mail	<input type="checkbox"/> Trap
IP address changed	<input type="checkbox"/> Mail	
Password changed	<input type="checkbox"/> Mail	
<b>DCD changed</b>		
Port	<input type="checkbox"/> Mail	<input type="checkbox"/> Trap
Port 1	<input type="checkbox"/> Mail	<input type="checkbox"/> Trap
<b>DSR changed</b>		
Port	<input type="checkbox"/> Mail	<input type="checkbox"/> Trap
Port 1	<input type="checkbox"/> Mail	<input type="checkbox"/> Trap
<input type="button" value="Submit"/>		

***Cold start***

This refers to starting the system from power off (contrast this with warm start). When performing a cold start, NPort 5110 will automatically issue an Auto warning message by e-mail, or send an SNMP trap after booting up.

***Warm start***

This refers to restarting the computer without turning the power off. When performing a warm start, NPort 5110 will automatically send an e-mail, or send an SNMP trap after rebooting.

***Authentication failure***

The user inputs a wrong password from the Console or Administrator. When authentication failure occurs, NPort 5110 will immediately send an e-mail or send an SNMP trap.

***IP address changed***

The user has changed NPort 5110's IP address. When the IP address changes, NPort 5110 will send an e-mail with the new IP address before NPort 5110 reboots. If the NPort 5110 is unable to send an e-mail message to the mail server within 15 seconds, NPort 5110 will reboot anyway, and abort the e-mail auto warning.

***Password changed***

The user has changed NPort 5110's password. When the password changes, NPort 5110 will send an e-mail with the password changed notice before NPort 5110 reboots. If the NPort 5110 is unable to send an e-mail message to the mail server within 15 seconds, NPort 5110 will reboot anyway, and abort the e-mail auto warning.

**DCD changed**

The DCD (Data Carrier Detect) signal has changed, also indicating that the modem connection status has changed. For example, a DCD change to high also means "Connected" between local modem and remote modem. If the DCD signal changes to low, it also means that the connection line is down.

When the DCD changes, NPort 5110 will immediately send an e-mail or send an SNMP trap.

**DSR changed**

The DSR (Data Set Ready) signal has changed, also indicating that the data communication equipment's power is off. For example, a DSR change to high also means that the DCE is powered ON. If the DSR signal changes to low, it also means that the DCE is powered off.

When the DSR changes, NPort 5110 will immediately send an e-mail or send an SNMP trap.

***Mail***

Setting	Factory Default	Necessity
Enable, Disable	Disable	Optional

This feature helps the administrator manage how the NPort 5110 sends e-mail to pre-defined e-mail boxes when the enabled events—such as Cold start, Warm start, Authentication failure, etc.—occur. To configure this feature, click on the Event Type Mail checkbox.

***Trap***

Setting	Factory Default	Necessity
Enable, Disable	Disable	Optional

This feature helps the administrator manage how the NPort 5110 sends SNMP Trap to a pre-defined SNMP Trap server when the enabled events—such as Cold start, Warm start, Authentication failure, etc.—occur. To configure this feature, click on the Event Type Trap checkbox.

## Change Password

The screenshot shows the 'Change password' web page. On the left is a navigation menu with the following items: Main Menu, Overview, Basic Settings, Network Settings, Serial Settings (expanded), Port 1, Operating Settings (expanded), Port 1, Accessible IP Settings, Auto Warning Settings (expanded), E-mail and SNMP Trap, Event Type, **Change Password** (highlighted), Load Factory Default, and Save/Restart. The main content area is titled 'Change password' and contains three text input fields labeled 'Old password:', 'New password:', and 'Retype password:'. A 'Submit' button is located at the bottom right of the form area.

Input the “Old password” and “New password” to change the password. Leave the password boxes blank to erase the password. If the password is erased, then NPort 5110 will not have password protection.



### ATTENTION

If you forget the password, the ONLY way to configure NPort 5110 is by using the Reset button on NPort 5110's casing to “Load Factory Default.” Remember to export the configuration file using Windows Administrator when you finish the configuration. By using the Import function of Windows Administrator, your configuration can be re-loaded into NPort 5110 after using “Load Factory Default.” Refer to Chapter 6 for more details about the Export and Import function.

## Load Factory Defaults

The screenshot shows the 'Load Factory Default' web page. The left navigation menu is identical to the previous screenshot, with 'Load Factory Default' highlighted. The main content area is titled 'Load Factory Default' and contains the following text: 'This function will reset all MOXA NPort Server settings to their factory default values. Be aware that previous settings will be lost.' Below this text is a 'Submit' button.

This function will reset all of NPort 5110's settings to the factory default values. Be aware that previous settings will be lost.

## Configuring Windows Administrator

---

The following topics are covered in this chapter:

- ❑ **Overview**
- ❑ **Installing Windows Administrator**
- ❑ **Configuration**
  - Broadcast Search
  - Unlock Password Protection
  - Configuring NPort 5110
  - Upgrade Firmware
  - Export/Import
- ❑ **Monitor**
- ❑ **Port Monitor**
- ❑ **COM Mapping**
  - On-line COM Mapping
  - Off-line COM Mapping
- ❑ **IP Location**


## Overview

Windows Administrator is designed to let you install and configure your NPort 5110 products easily over the network. Windows Administrator provides five function groups that ease the installation process, allows off-line COM mapping, and provides monitoring and IP location server functions.


Device Server Administrator is an integrated software suite that bundles Device Server Administrator and the IP Serial Library, and provides everything you need to remotely manage, monitor, and modify your NPort 5110s—hassle free.

## Installing Windows Administrator


1. Once the Setup program starts running, click on **Yes** to proceed.

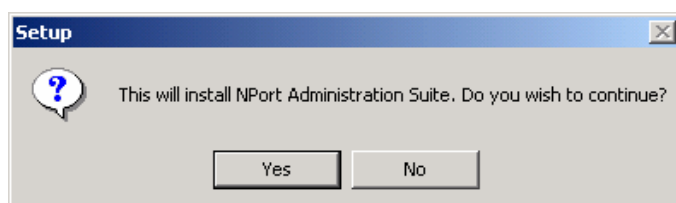


2. Click on **Next** when the **Welcome** window opens to proceed with the installation.

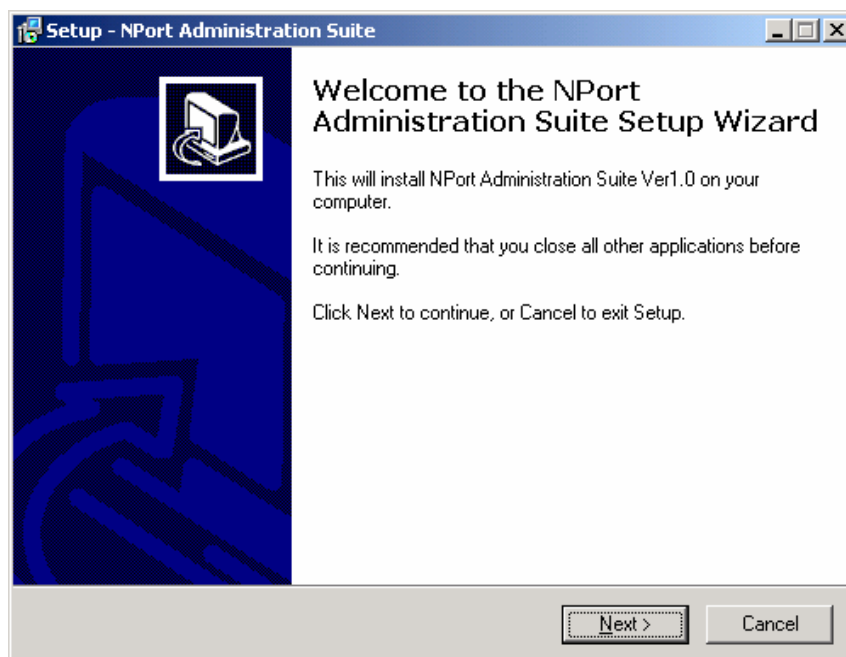


- Click on **Next** to install program files in the default directory, or select an alternative location.

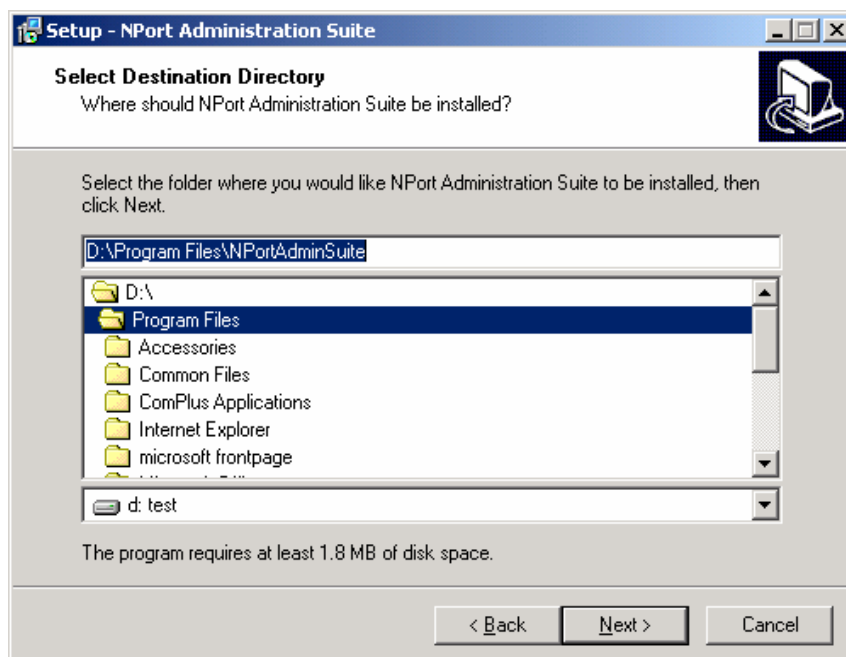


- Click on **Next** to install the program using the default program name, or select a different name.

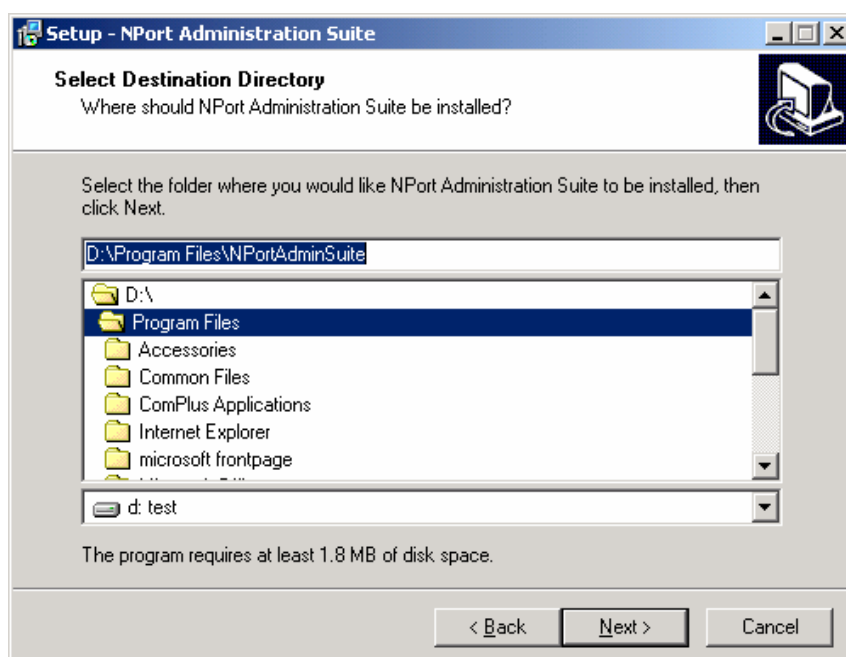


5. Click on **Install** to proceed with the installation.

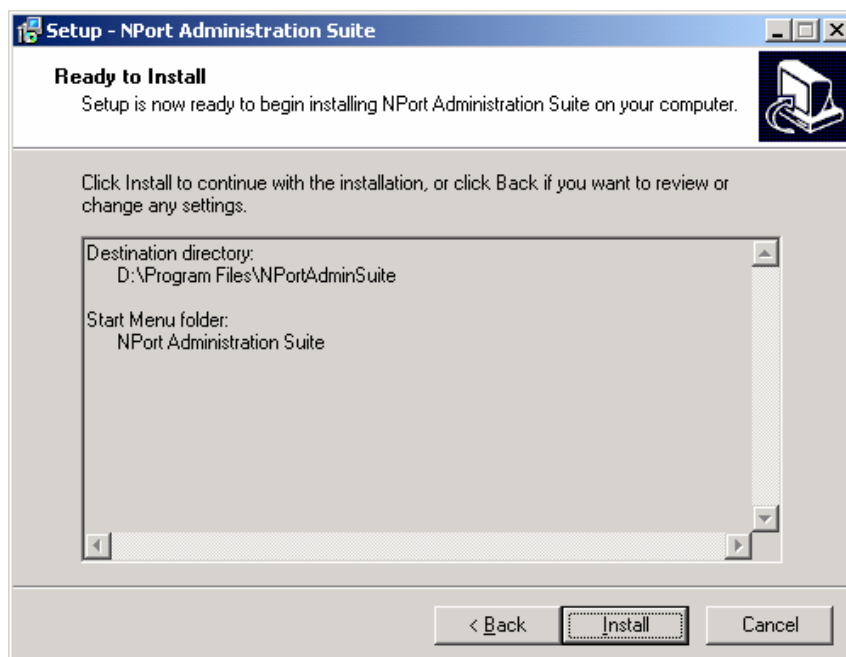


6. The Installing window reports the progress of the installation.

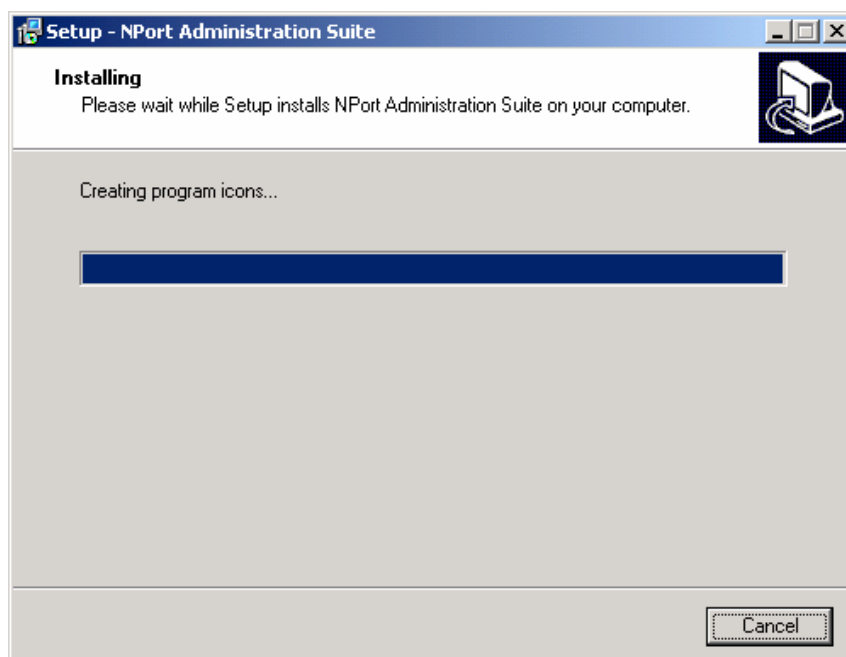

7. Click on **Next** to proceed with the installation.

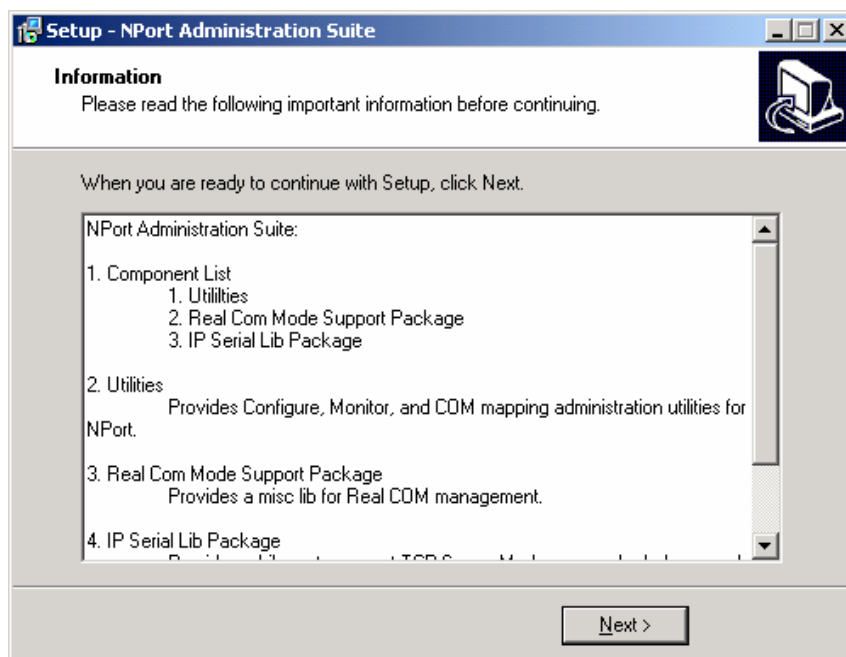

8. Click on **Finish** to complete the installation of NPort 5110 Administration Suite.

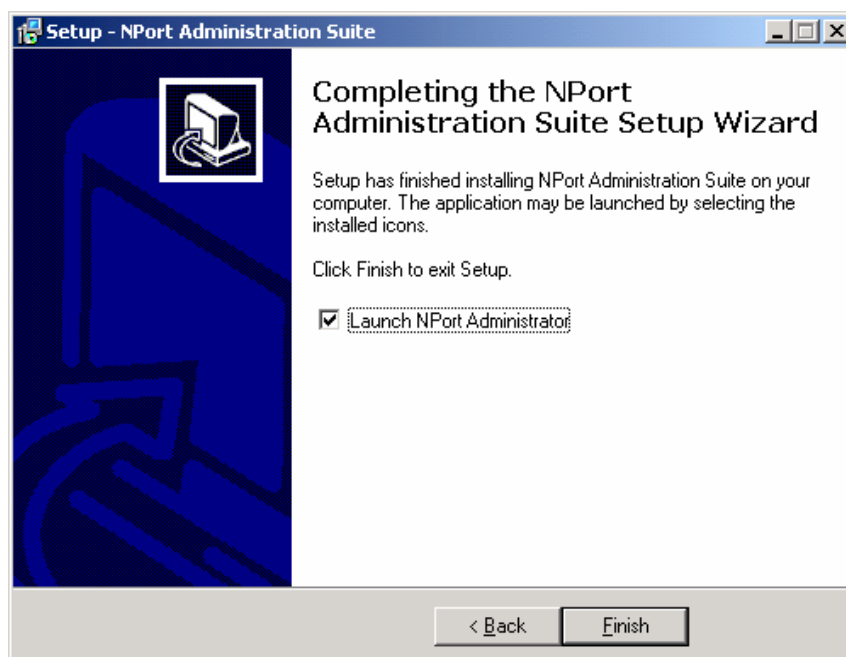




## Configuration

The Administrator-Configuration window is divided into four parts.


- The top part is the function list and online help area. (Windows NT does not support this .chm file format.)
- The left part lists the five Administrator function groups.
- The right part shows a list of NPort 5110 serial device servers, each of which can be selected to process user requirements.
- The bottom part is the Log area, which shows useful messages that record the user's processing history.

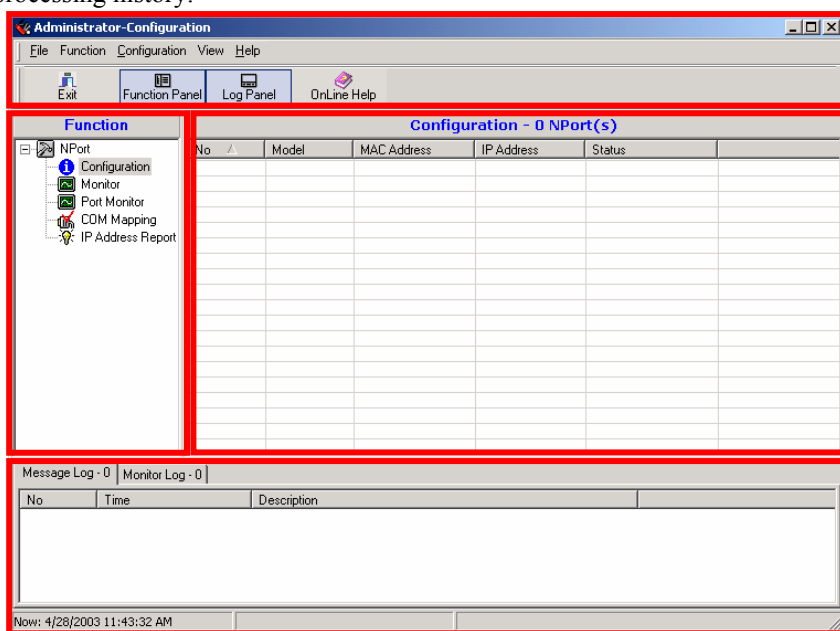


## Broadcast Search

1. The Broadcast Search function is used to locate all NPort 5110s that are connected to the same LAN as your computer.

Since the Broadcast Search function searches by MAC address and not IP address, all NPort 5110s connected to the LAN will be located, regardless of whether or not they are part of the same subnet as the host.

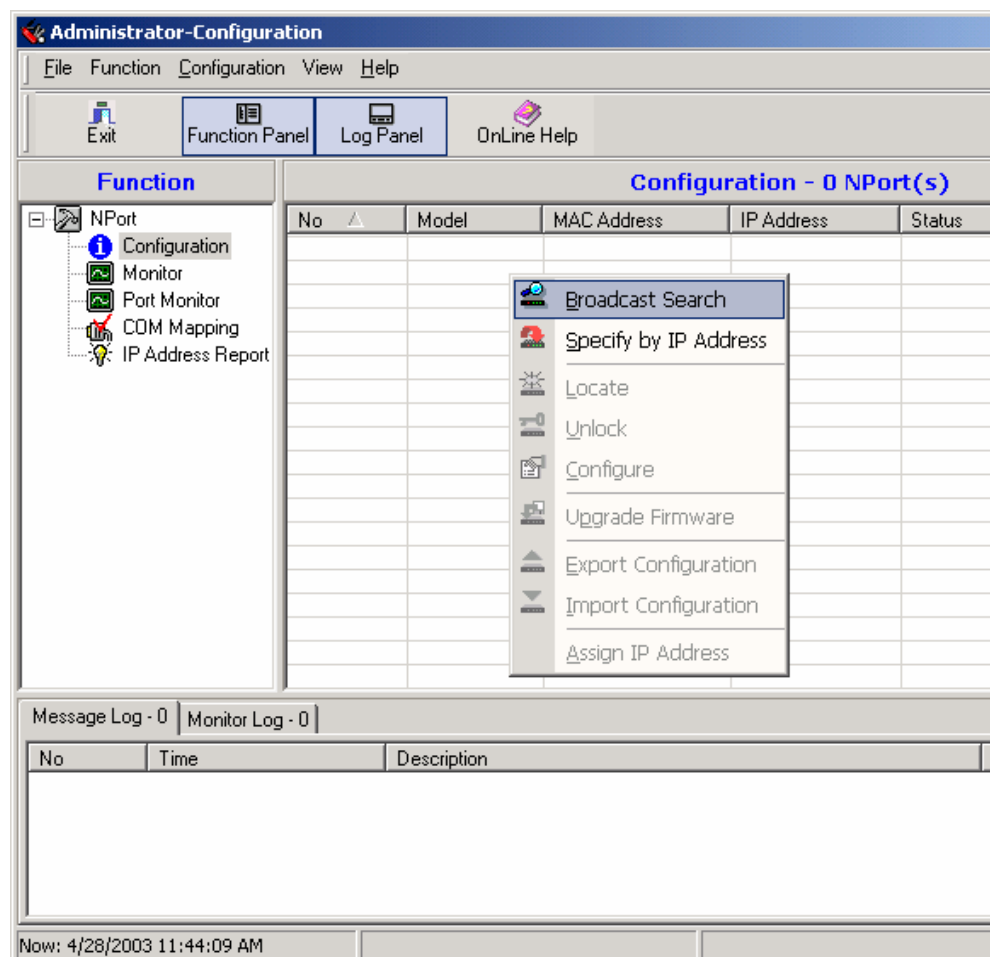


2. The Broadcast Search window will open and display the Model, IP Address, MAC Address, and Progress (of the search for that particular device).

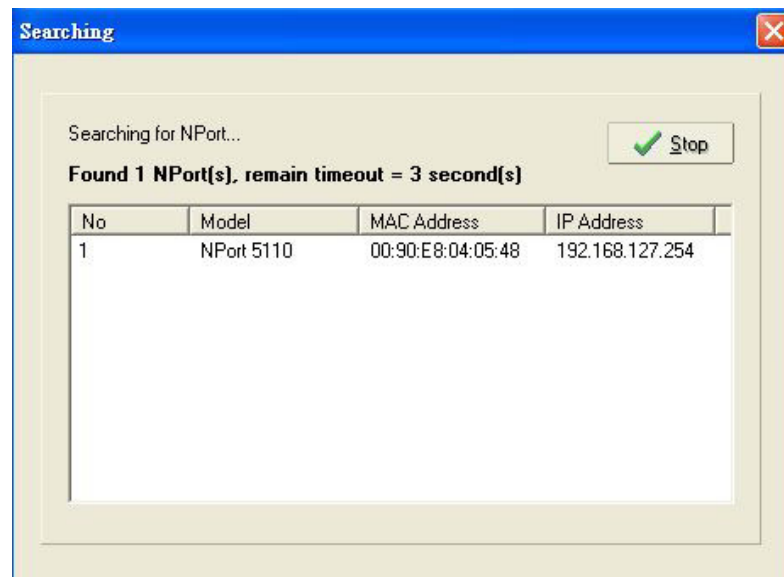

- When the search is complete, the Broadcast Search window closes, and the NPort 5110s that were located are displayed in the right pane of the Administrator window.

If you found more than one server connected to this network, refer to the MAC address sticker on your server(s) to determine which servers are the ones you wish to configure.


To configure an NPort 5110, place the cursor over the row displaying that NPort 5110's information, and then double click.

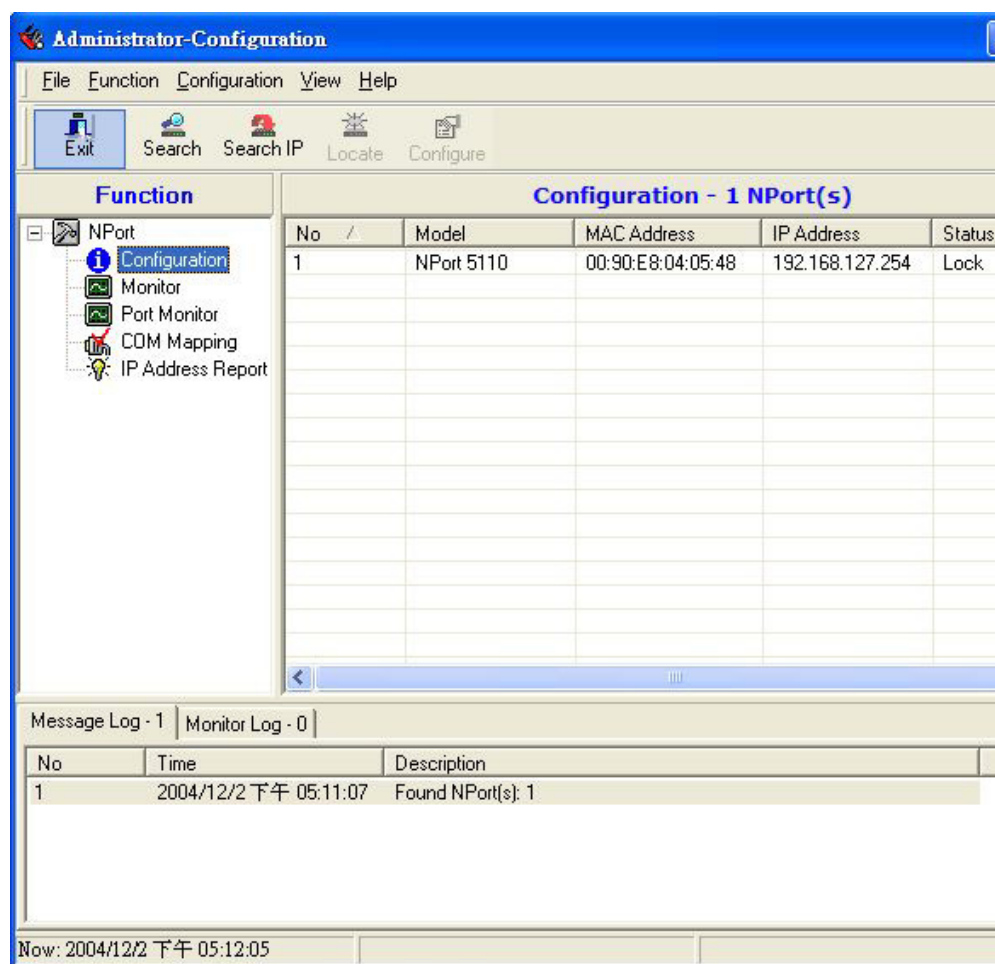**ATTENTION**


Before modifying a NPort 5110's configuration, use Broadcast Search or Specify by IP Address to locate NPort 5110s connected to the LAN.

## Unlock Password Protection

1. If the NPort 5110 is password protected, then you will not be able to use the right click method to open the configuration page.

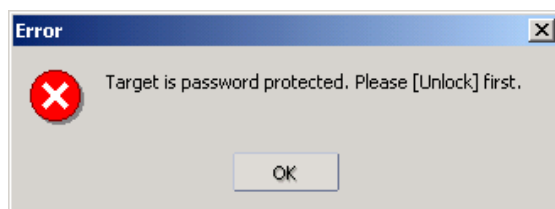


2. Instead, select an NPort 5110 with "Lock" status, right click the locked NPort 5110, and then select the unlock button.

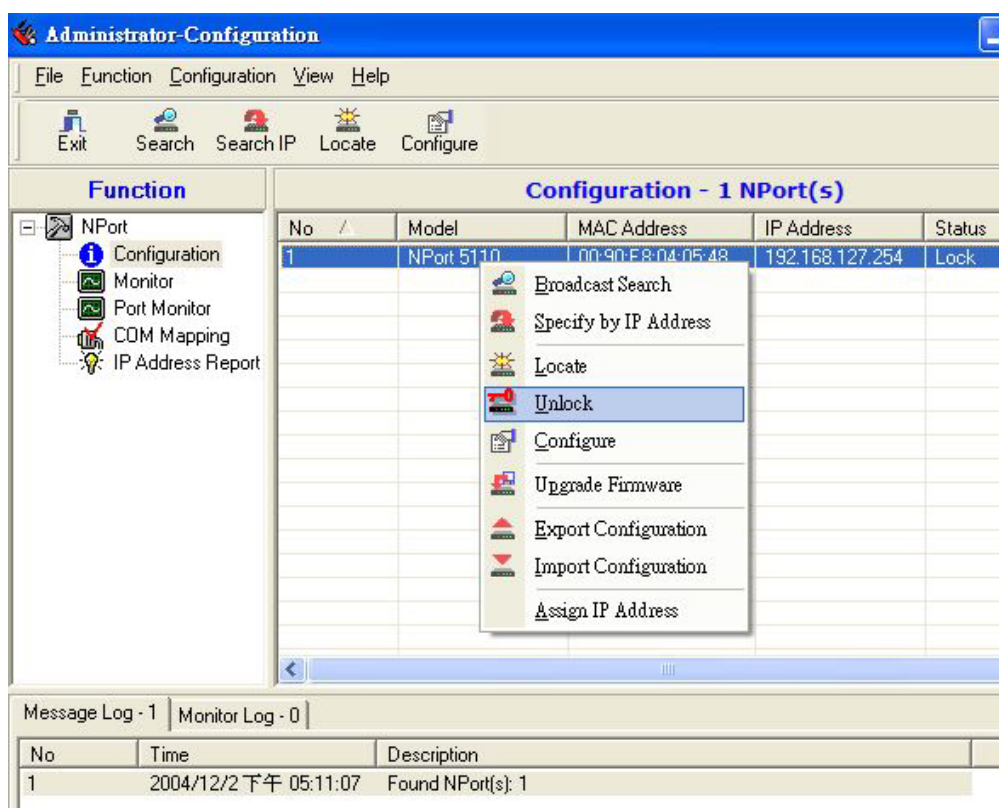

3. After inputting the correct password, the Administrator will display a message box as shown here.



4. The previous “Lock” status will switch to “Unlock” status. Administrator will keep this NPort 5110 in the Unlock status throughout this Administrator session.

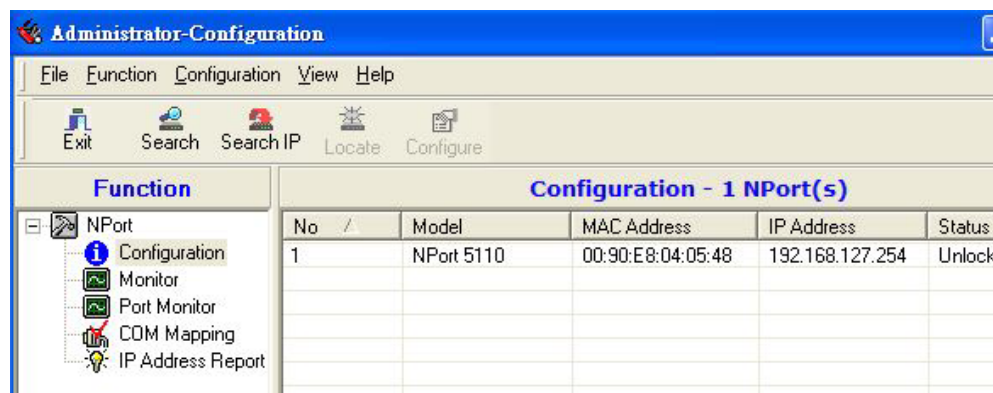

The meanings of the six states are as follows (note that the term Fixed is borrowed from the standard fixed IP address networking terminology):

#### **Lock**

The NPort 5110 is password protected, “Broadcast Search” was used to locate it, and the password has not yet been entered from within the current Administrator session.

#### **Unlock**

The NPort 5110 is password protected, “Broadcast Search” was used to locate it, and the password has been entered from within the current Administrator session. Henceforth during this Administrator session, activating various utilities for this NPort 5110 will not require re-entering the server password.

#### **Blank**

The NPort 5110 is not password protected, and “Broadcast Search” was used to locate it.

#### **Fixed**

The NPort 5110 is not password protected, and “Search by IP address” was used to locate it.

#### **Lock Fixed**


The NPort 5110 is password protected, “Specify by IP address” was used to locate it, and the password has not yet been entered from within the current Administrator session.

#### **Unlock Fixed**


The NPort 5110 is password protected, “Specify by IP address” was used to locate it, and the password has been entered from within the current Administrator session. Henceforth during this Administrator session, activating various utilities for this NPort 5110 will not require re-entering the server password.

## Configuring NPort 5110

1. Input the password to Unlock the NPort 5110. Right click on a specific NPort 5110 and select configure to start the configuration.

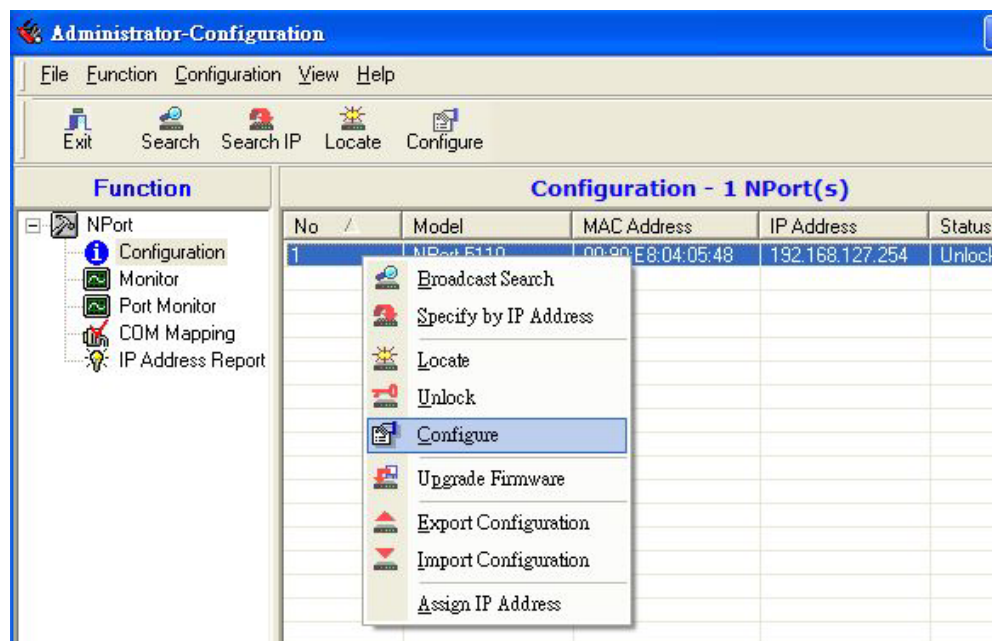

2. The progress bar shows that Administrator is retrieving configuration information from the specific NPort 5110.

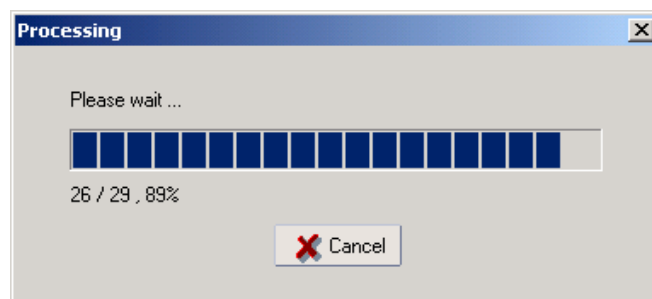

3. Refer to Chapter 5 for each parameter's function definition. To modify the configuration, you must first click in the modify box to activate the parameter setting box.

The screenshot shows the 'Configuration' window for the NPort 5110. The window has a blue title bar and a red close button. On the left, there is an 'Information' section with the following details: Model Name (NPort 5110), MAC Address (00:90:E8:04:05:48), Serial Number (40548), and Firmware Ver. (Ver 1.0). The main area is divided into four tabs: 'Accessible IPs', 'Auto Warning', 'IP Address Report', and 'Password'. The 'Basic' tab is selected, showing a 'Modify' checkbox (unchecked) and a 'Server Name' text box containing 'NP5110\_40548'. Below this, there are four more fields: 'Time Zone' (a dropdown menu), 'Local Date' (a date picker showing '1899/12/30'), 'Local Time' (a time picker showing '上午 12:00:00'), and 'Time Server' (a text box). At the bottom of the main area, there is another 'Modify' checkbox (unchecked) and two checked checkboxes: 'Enable Web Console' and 'Enable Telnet Console'. At the very bottom of the window, there is a message: 'Click the "Modify" check box to modify configuration', and two buttons: 'OK' (with a green checkmark) and 'Cancel' (with a red X).

**ATTENTION**


You can simultaneously modify the configurations of multiple NPort 5110s that are of the same model.

To select multiple NPort 5110s, hold down the Ctrl key when selecting additional NPort 5110s, or hold down the Shift key to select a group of NPort 5110s.




## Upgrade Firmware


1. Input the password to Unlock the NPort 5110, and then right click on a specific NPort 5110 and select the **Upgrade Firmware** function to start upgrading the firmware.

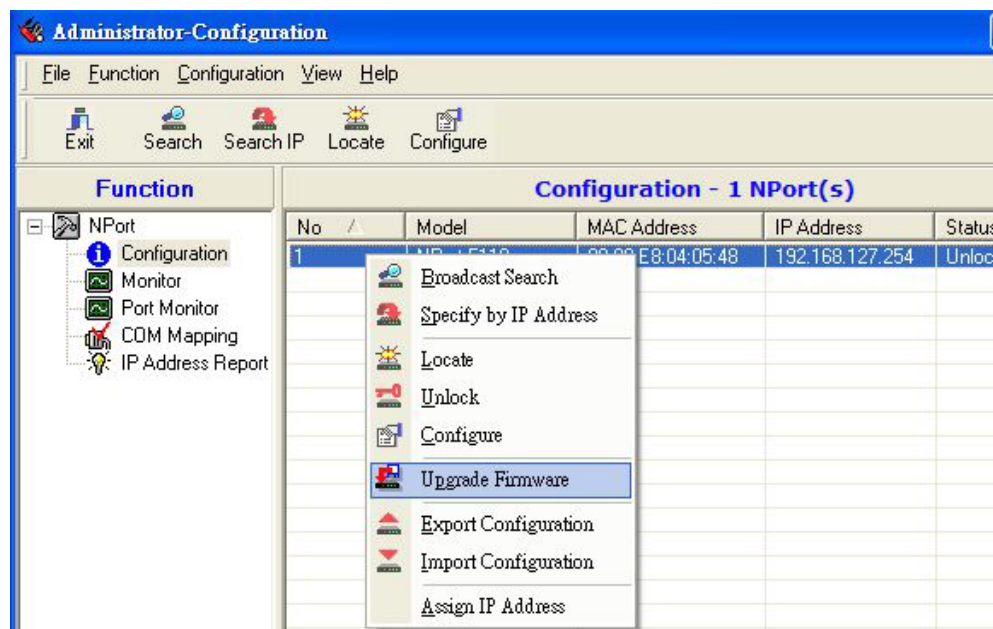

2. Select the correct ROM file to be downloaded to the NPort 5110.

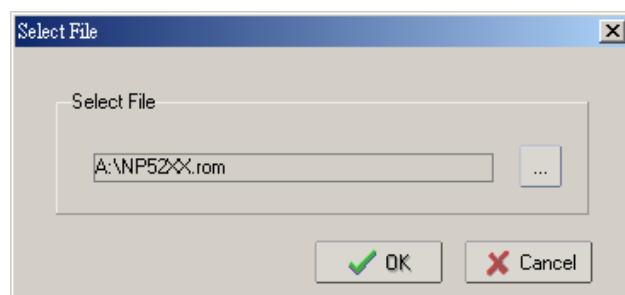


3. Wait patiently while the Upgrade Firmware action is being processed.

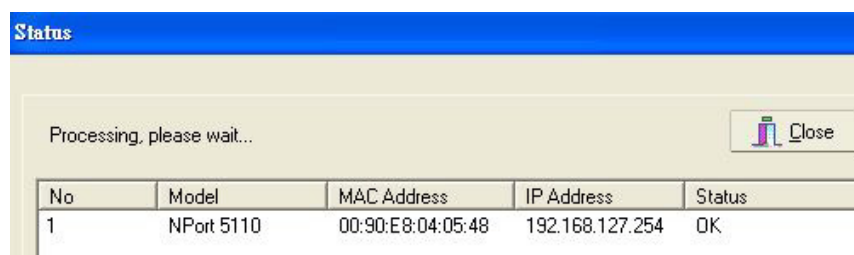


## Export/Import

Right click on a specific NPort 5110 and select the Export function to start Exporting the configuration file. The Export Configuration function is a handy tool that can be used to produce a text file containing the current configuration of a particular NPort 5110.

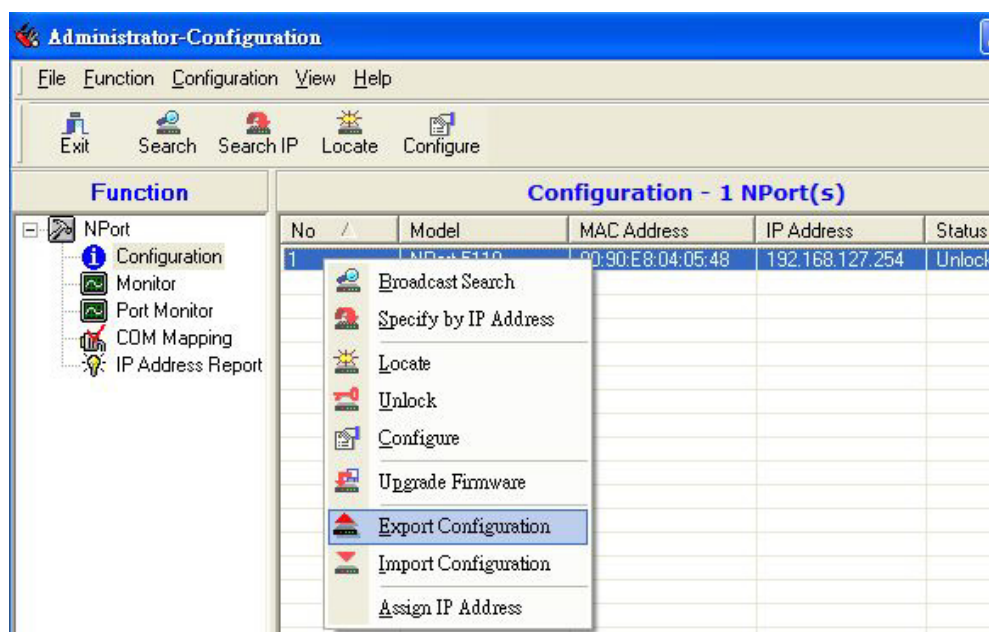

The Import Configuration function is used to import a NPort 5110 configuration from a file into one or more of the same model NPort 5110.

To import a configuration, first select the target servers (use the left mouse button to select servers; simply hold down the Ctrl key when selecting the second, third, etc., NPort 5110).

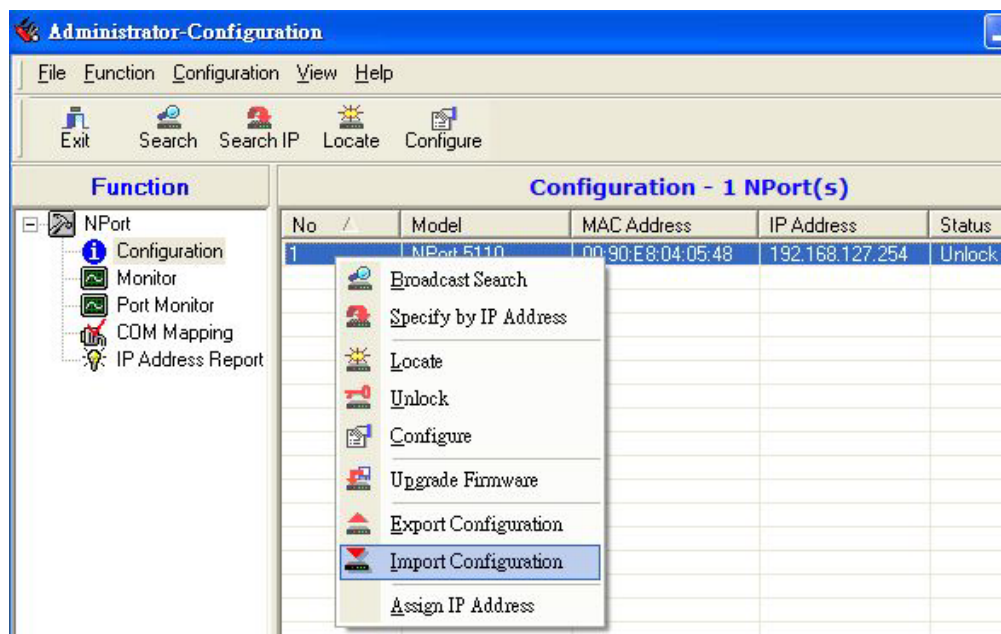

**ATTENTION**

You can simultaneously import the same configuration file into multiple NPort 5110s that are of the same model.

To select multiple NPort 5110s, hold down the Ctrl key when selecting an additional NPort 5110, or hold down the Shift key to select a block of NPort 5110s.

## Monitor


1. To start the Monitor function, Use **Broadcast Search** under the Configuration Function group, and then click on **Monitor** → **Add Target** → **Select target** from the list, or click on **Monitor**, and then **Add Target** → **Rescan**.
2. Select **Broadcast** under the **Configuration** menu bar item.

No	Model	MAC Address	IP Address	Status
1	NPort 5230	00:90:E8:22:33:44	192.168.127.254	
2	NPort 5430	00:90:E8:00:01:09	192.168.3.135	Lock
3	NPort 5210	00:90:E8:00:02:50	192.168.3.119	
4	NPort 5410	00:90:E8:00:00:05	192.168.4.105	
5	NPort 5610-8	00:90:E8:00:00:12	192.168.4.128	


3. Click on **Monitor**.

No	Model	MAC Address	IP Address	Alive


4. Select **Add Target**.

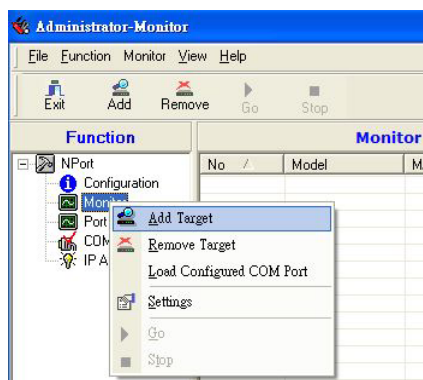


5. When you select **Add Target**, you will see a NPort 5110 list that looks the same as when using Configuration → Broadcast Search. Check the NPort 5110 you would like to Monitor, and then click **OK**.

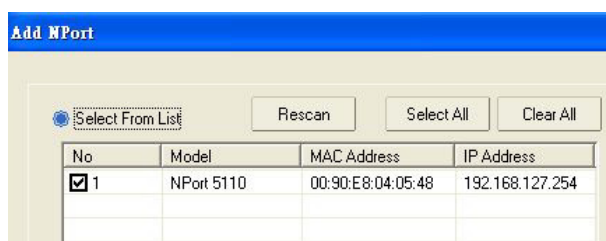


6. The NPort 5110 list will now appear on the Monitor screen.

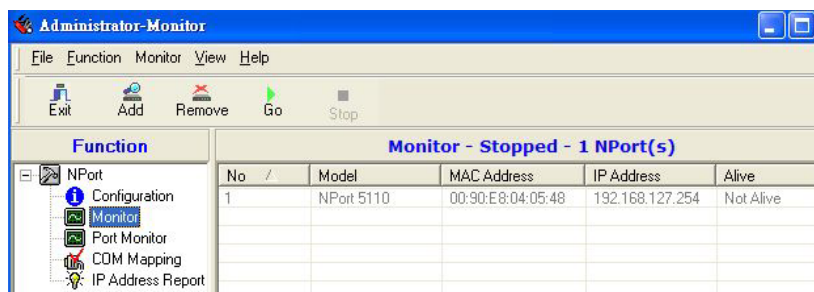


7. Right click the panel and select **Settings**.

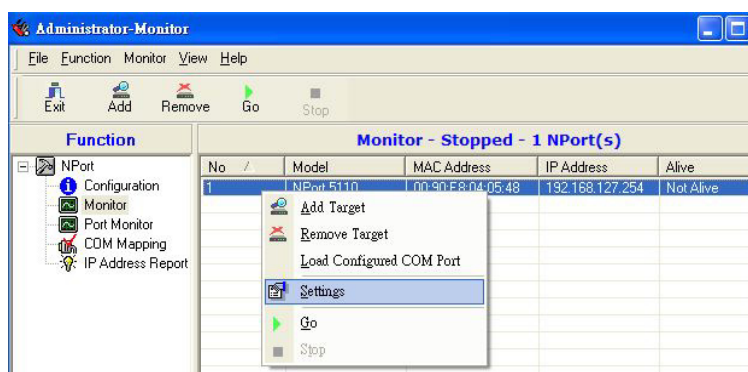


8. Select or de-select **Monitor Items**. Use the single arrowhead buttons to move highlighted items from one box to the other. Use the double arrowhead buttons to move all items in one box to the other.

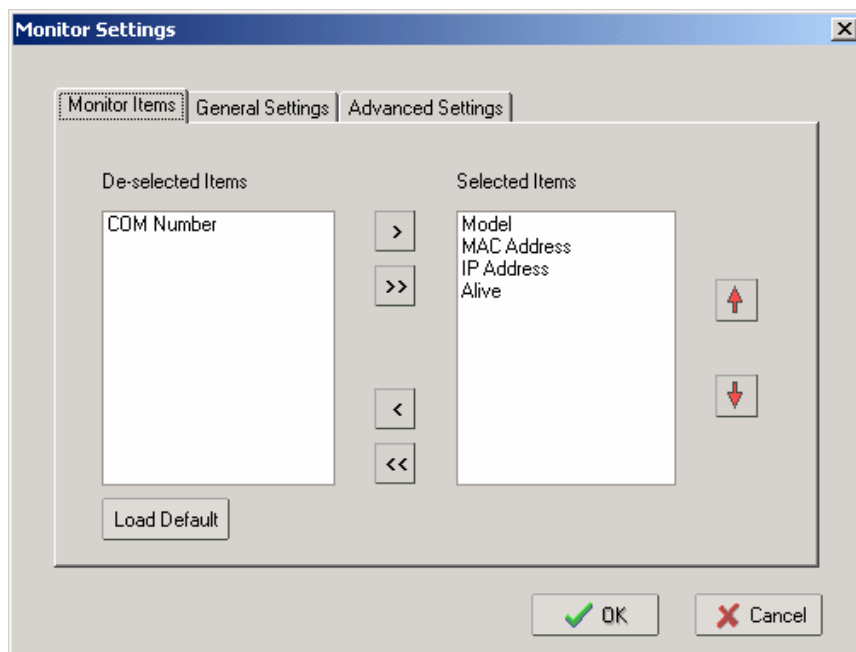


9. Select a **Refresh Rate** (the default is 3 seconds).

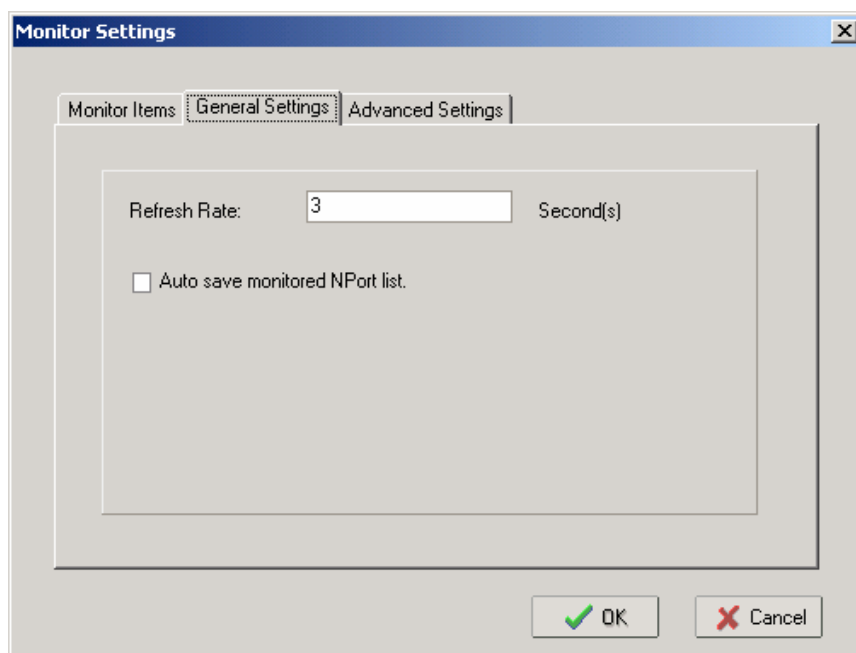


10. Select **Display warning message** for new event or **Play warning music** for new event. In the second case, you must enter the path to the WAV file that you want to be played. "New event" means that one of the NPort 5110s in the monitor is "Alive" or "Not Alive," or has lost connection with the Monitor program.

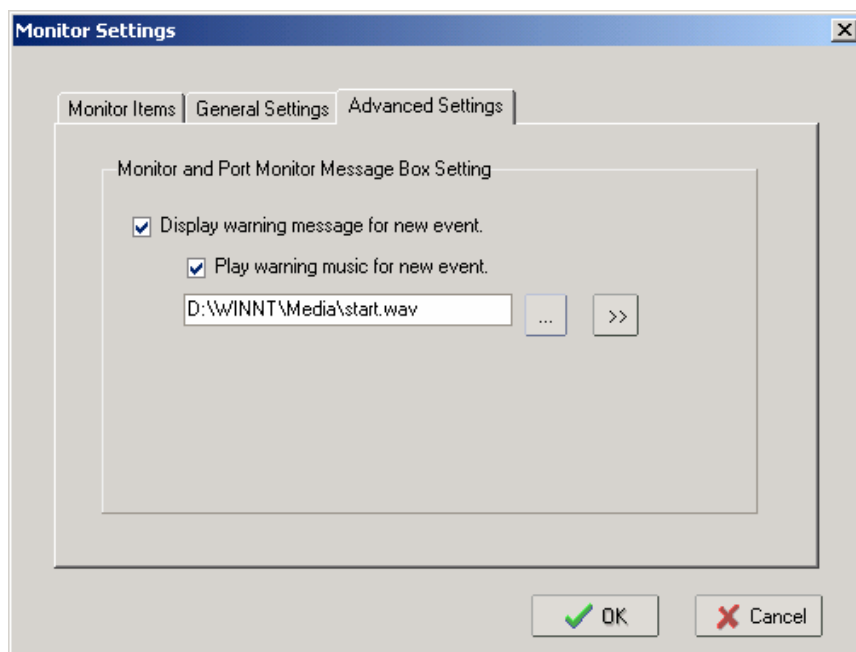


11. Press **Go** to start Monitor.

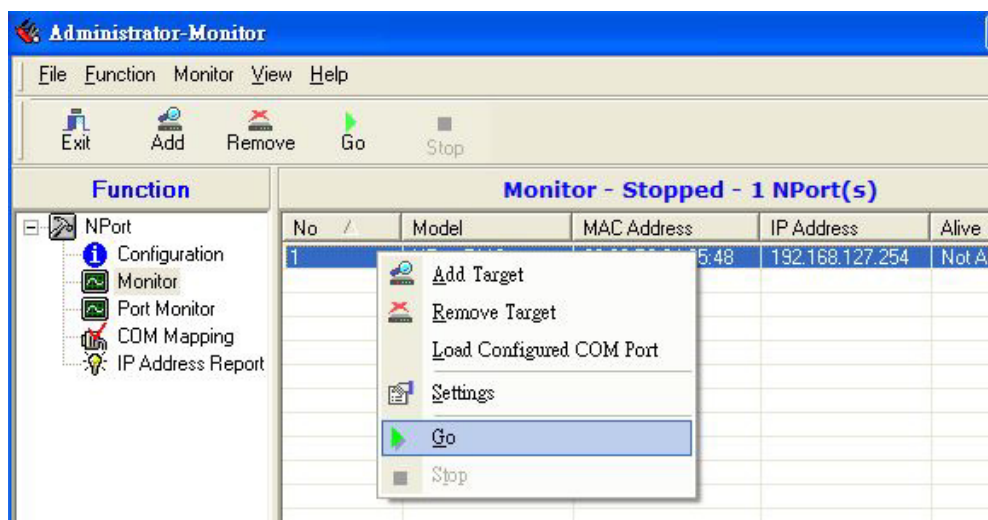


12. For this example, the NPort 5110 shown in the list will be monitored.

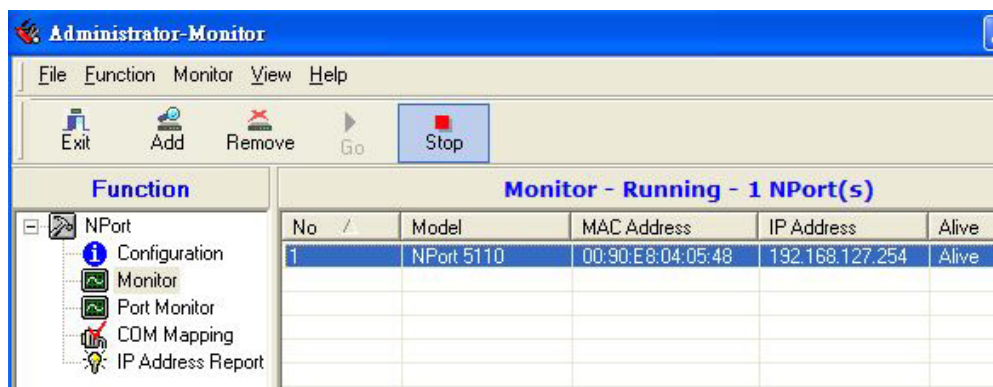

13. When one of the NPort 5110s loses connection with the Monitor program, a warning alert will display automatically. The warning music will be played at the same time.

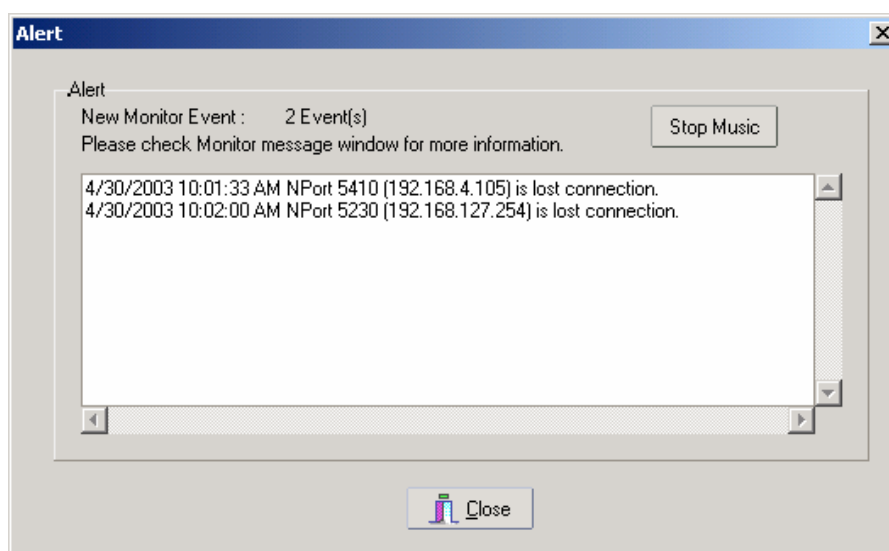


14. In the Monitor screen, you can see that the "Not Alive" NPort 5110 is shown in red color.

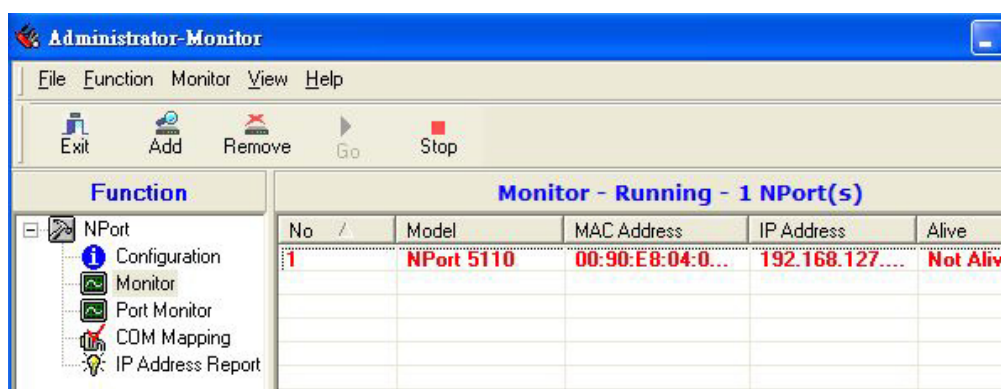




15. If the NPort 5110 gets reconnected, a warning will be displayed to remind the user that the NPort 5110 is now "Alive."

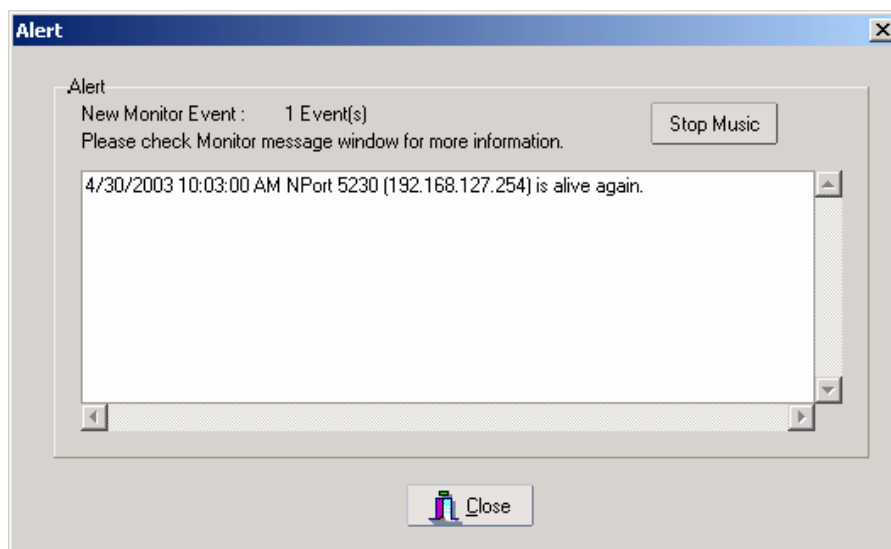


16. The NPort 5110 that was reconnected, and is now "Alive," will be shown in black color.

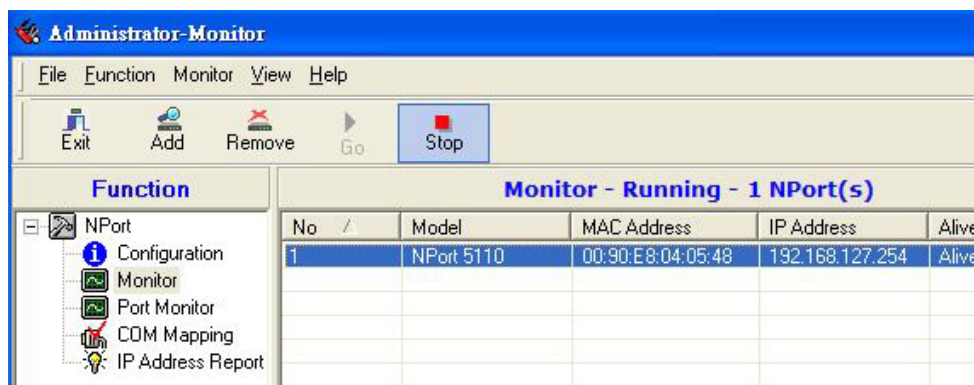




## Port Monitor

The process described here is the same as in the previous “Monitor” section. The only difference is that you can select more items under Port Monitor than under Monitor.

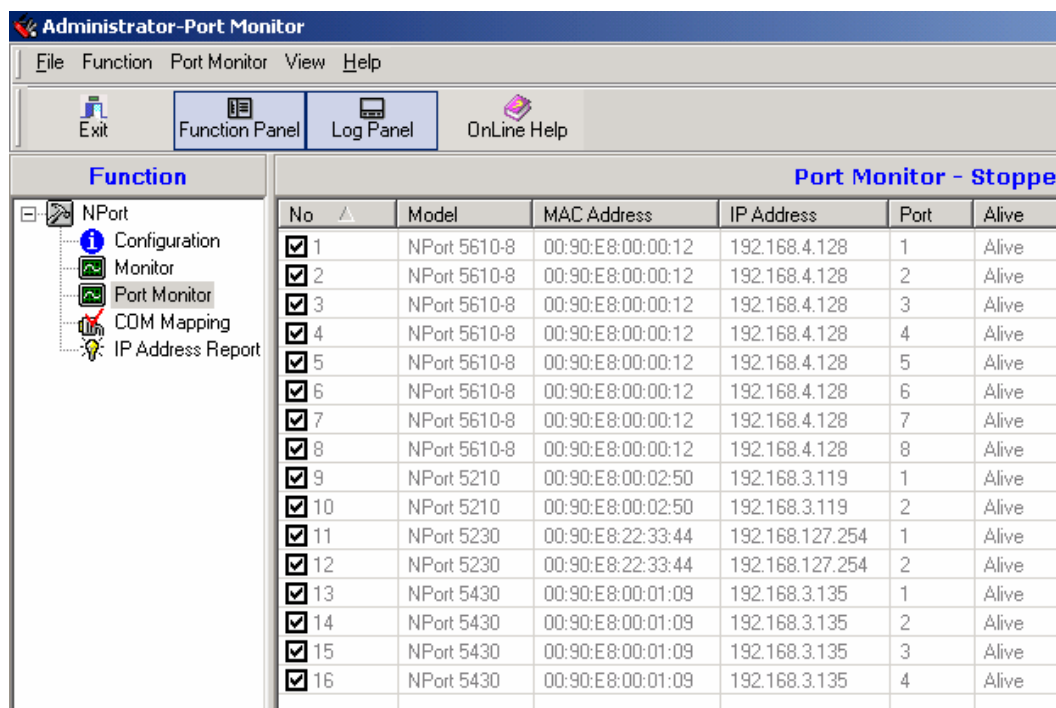

Select or de-select **Monitor Items**. Use the single arrowhead buttons to move highlighted items from one box to the other. Use the double arrowhead buttons to move all items in one box to the other.

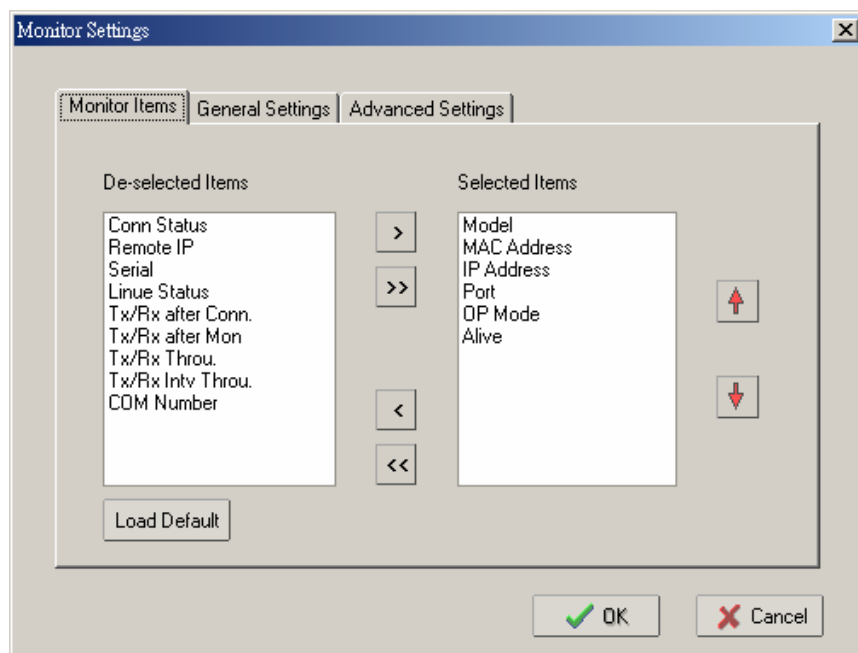

## COM Mapping

Windows Administration Suite comes with Windows 95/98/ME/NT/2000/XP Real COM drivers. After you install NPort 5110 Administration Suite, there are two ways to set up the NPort 5110's serial port as your host's remote COM port.

The first way is with **On-line COM Mapping**. On-line COM Mapping will check to make sure that the NPort 5110 is connected correctly to the network, and then install the driver on the host computer.


The second way is with **Off-line COM Installation**, without connecting the NPort 5110 to the network first. Off-line COM Mapping can decrease the system integrator's effort by solving different field problems. Via off-line installation, users can process the host software installation and then install the NPort 5110 to different fields.

Use the following procedure to map COM ports:


1. **On-line COM Mapping:**  
Connect NPort 5110 to the network → Set NPort 5110 to the proper IP address → Map COMs to your host → Apply Change.
2. **Off-line COM Mapping:**  
Map COMs to your host → Apply Change → Connect NPort 5110 to the network → Configure NPort 5110's IP address.

### On-line COM Mapping


1. Broadcast **Search** for NPort 5110s on the network.

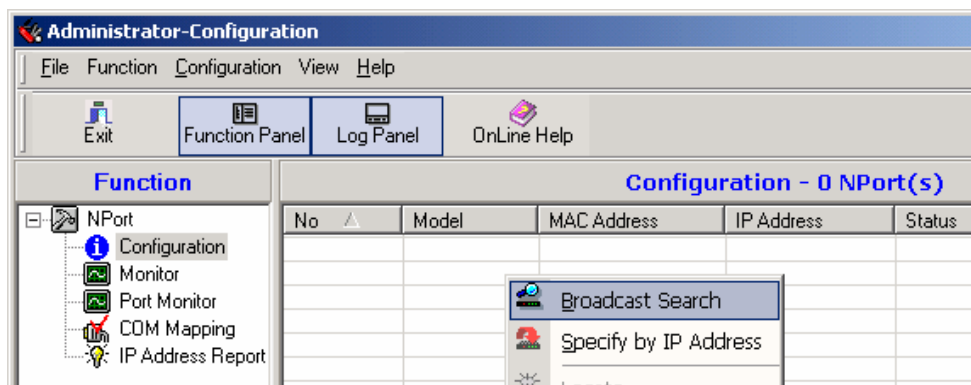


2. Select the **COM Mapping** function group.

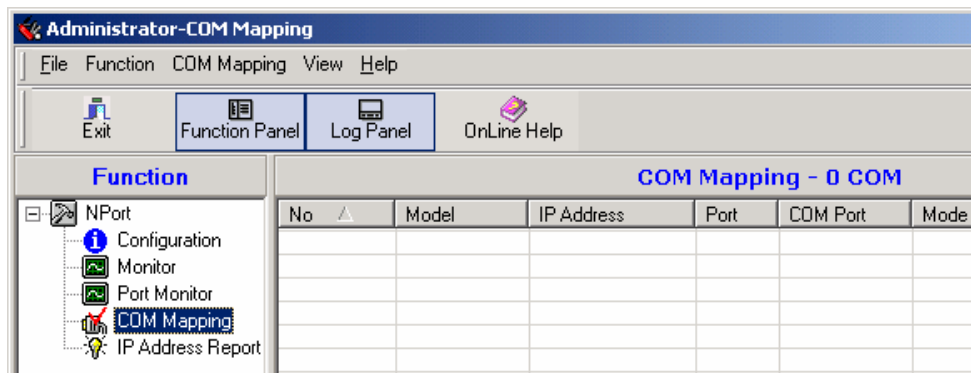


3. Add the **target** to which you would like to map COM ports.

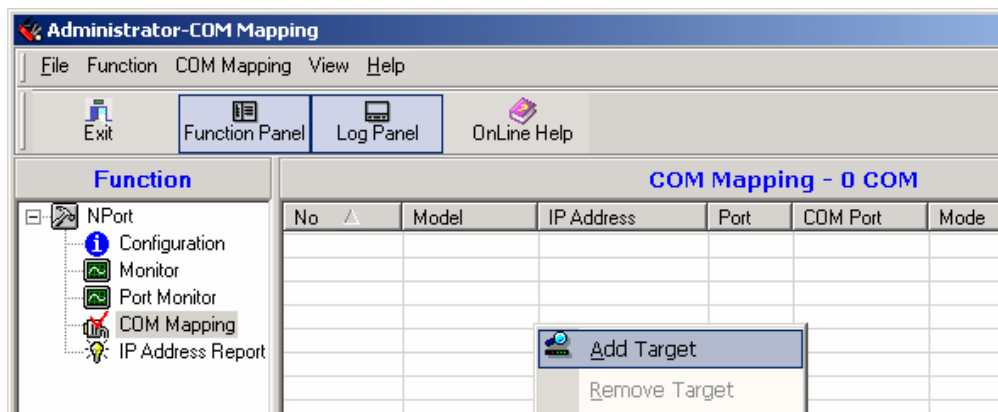



4. The NPort 5110 list that appears is the list generated by the previous Broadcast Search. Select the NPort 5110 that you would like to map COM ports to.

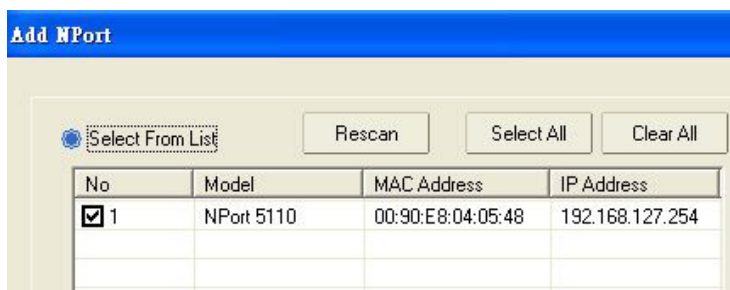

5. Select **COM Settings** to modify COM No., default setting, etc.

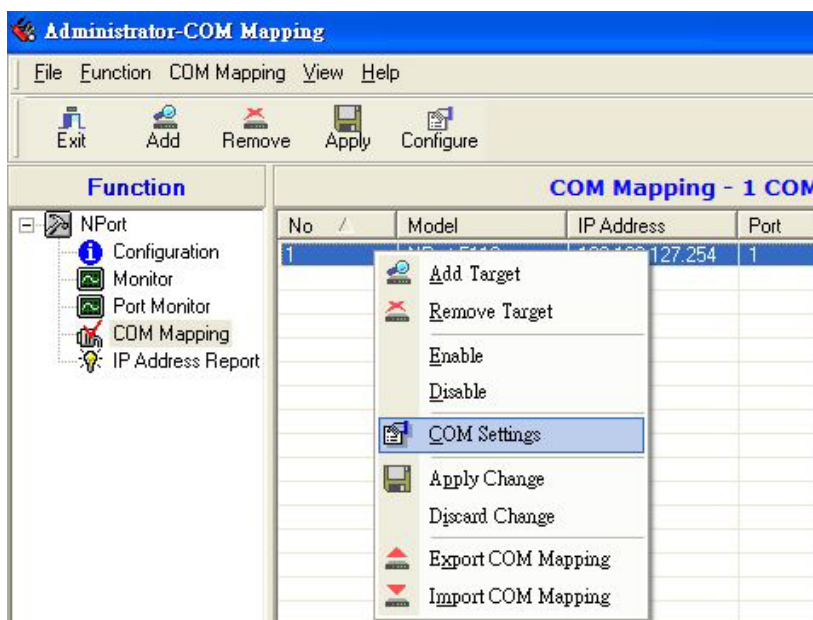


6. Select the COM No. COM ports that are “In use” or “Assigned” will also be indicated in this drop-down list. If you select multiple serial ports or multiple NPort 5110s, remember to check the “Auto Enumerating” function to use the COM No. you select as the first COM No.

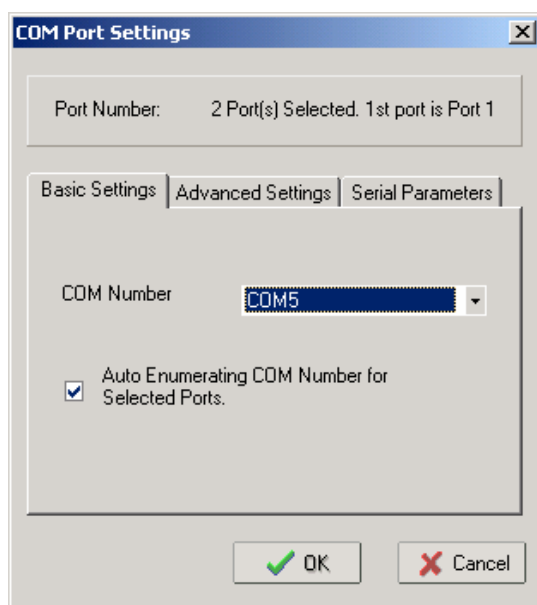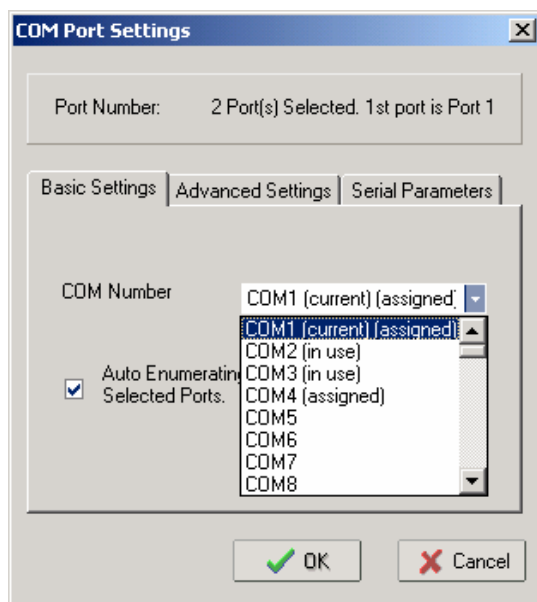

**Hi-performance** mode is the default for Tx mode. If the driver finishes sending data out to the NPort 5110, the driver will respond to the program with “Tx Empty.”

Under **classical** mode, the driver will not notify the user's program that the Tx is finished until all Tx data has been sent out from the NPort 5110; this mode will cause lower throughput. Classical mode is recommended if you want to ensure that all data is sent out before doing more processing.


**Enable/Disable Tx/Rx FIFO.** If disabled, NPort 5110 will send one byte each time the Tx FIFO becomes empty; and an Rx interrupt will be generated for each incoming byte. This will result in a faster response and lower throughput. If you want to use XON/XOFF flow control, we recommend setting FIFO to Disable.

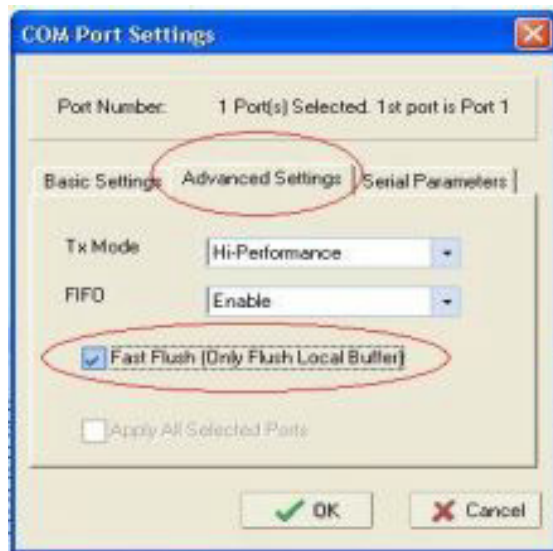


#### Fast Flush (only flush local buffer)

- We have added one optional Fast Flush function to Moxa's new NPort Real COM driver. The new function is available in **versions 1.2** and higher of **NPort Administrator Suite for NPort**.
- For some applications, the user's program will use the Win32 "PurgeComm()" function before it reads or writes data. With our design, after the program uses this Purge Comm() function, the NPort driver will keep querying NPort's firmware several times to make sure there is really no data queued in the NPort firmware buffer, rather than just flushing the local buffer. This kind of design is used because of some special considerations. However, it might take more time (about several hundred milliseconds) than a native COM1, because it needs to work via Ethernet. That's why the native COM ports on the motherboard can work fast with this function call, but NPort requires much more time. In order to accommodate other applications that require a faster response time, the new NPort driver implements a new "Fast Flush" option. Note that by default, this function is disabled.
- To begin with, make sure there are some "PurgeComm()" functions being used in your application program. In this kind of situation, you might find that your NPort exhibits a much poorer operation performance than when using the native COM1 port. Once you have enabled the "Fast Flush" function, you can check to see if there has been an improvement in performance.
- By default, the optional "Fast Flush" function is disabled. If you would like to enable this function, from the "NPort Administrator," double click on the COM ports that are mapped to the NPort, and then select the "Fast Flush" checkbox. You should find that when "Fast Flush" is enabled, the NPort driver will work faster with "PurgeComm()."


7. The Serial Parameter settings shown here are the default settings when the NPort 5110 is powered on. However, the program can redefine the serial parameters to different values after the program opens the port via Win 32 API.

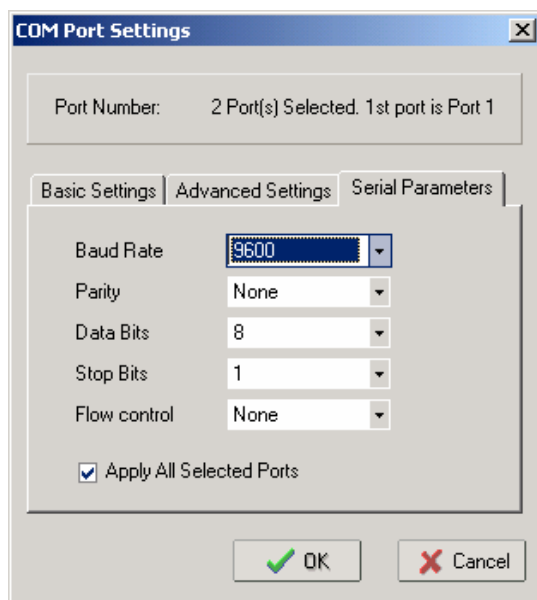


8. After setting the COM Mapping, remember to select **Apply Change** to save the information in the host system registry. The host computer will not have the ability to use the COM port until after Apply Change is selected.

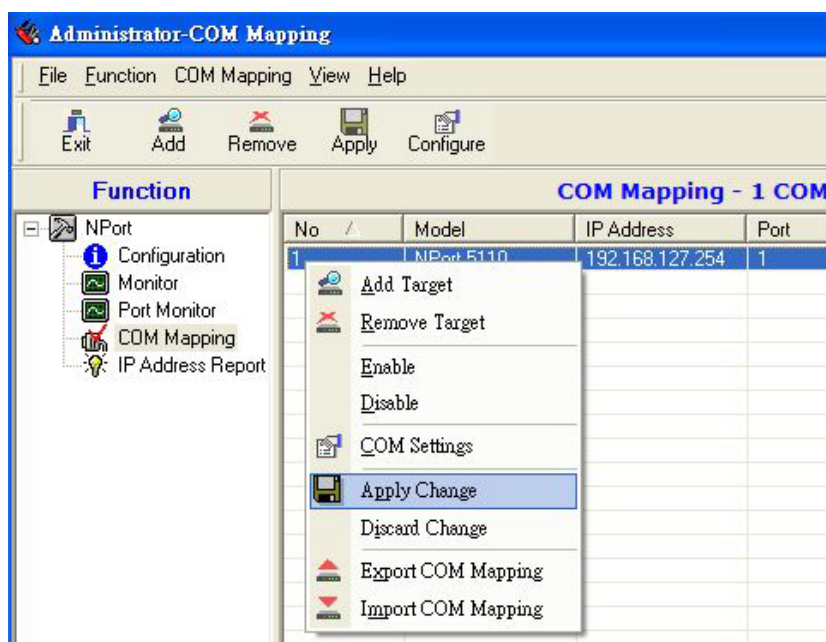

9. Select **Discard Change** to tell Administrator NOT to save the COM Mapping information to the host.

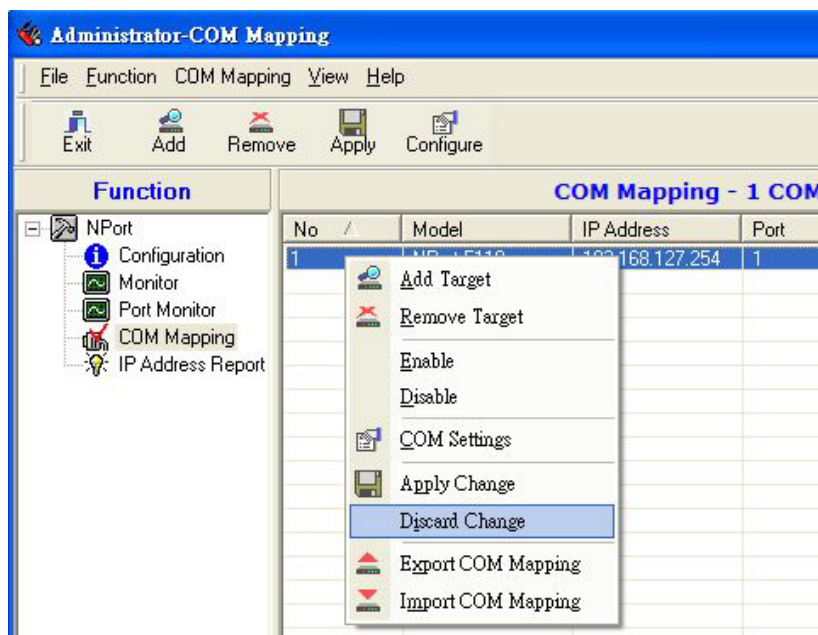


10. To save the configuration to a text file, select **Export COM Mapping**. You will then be able to import this configuration file to another host and use the same COM Mapping settings in the other host.

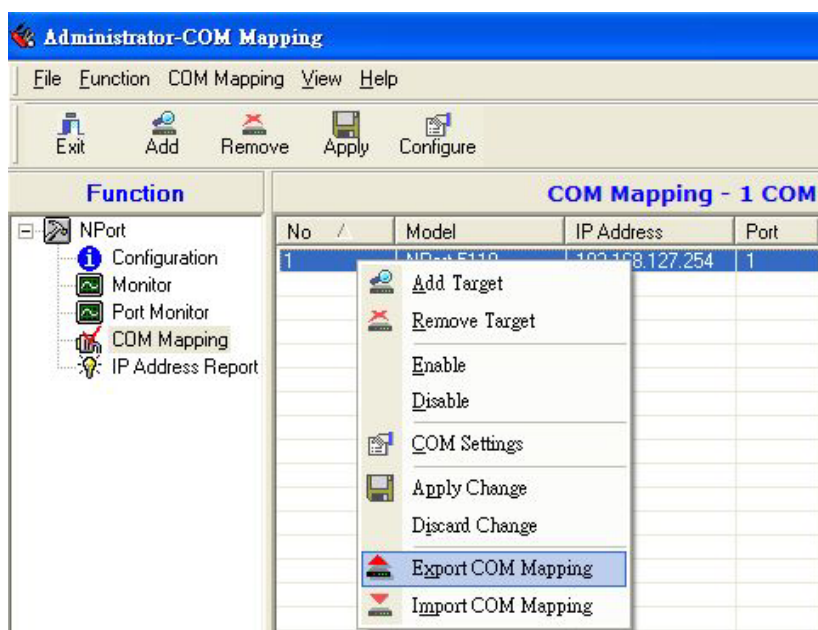




## Off-line COM Mapping

1. Add a target by inputting the IP address and selecting the Model Name without physically connecting the NPort 5110 to the network.

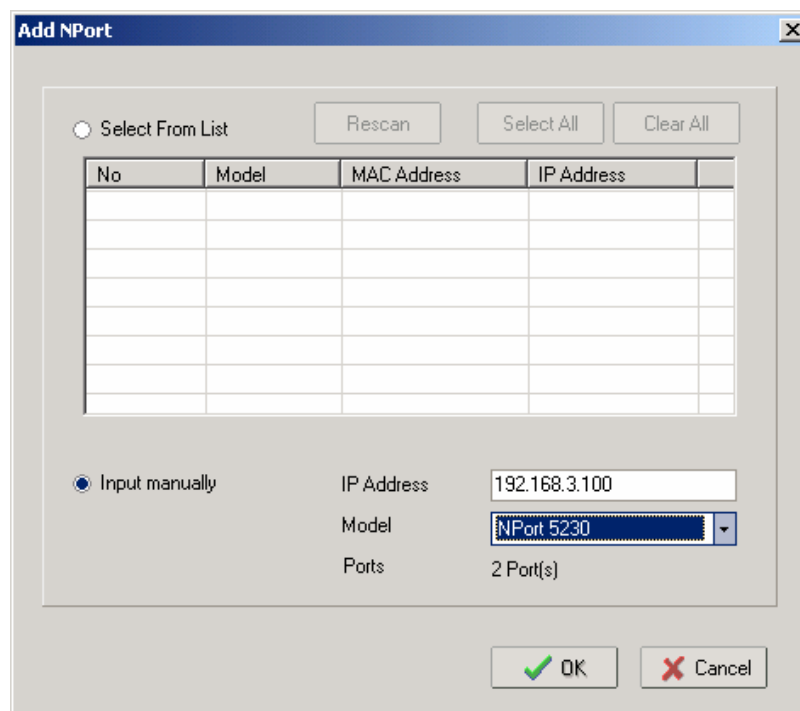

2. Select **Apply change**.

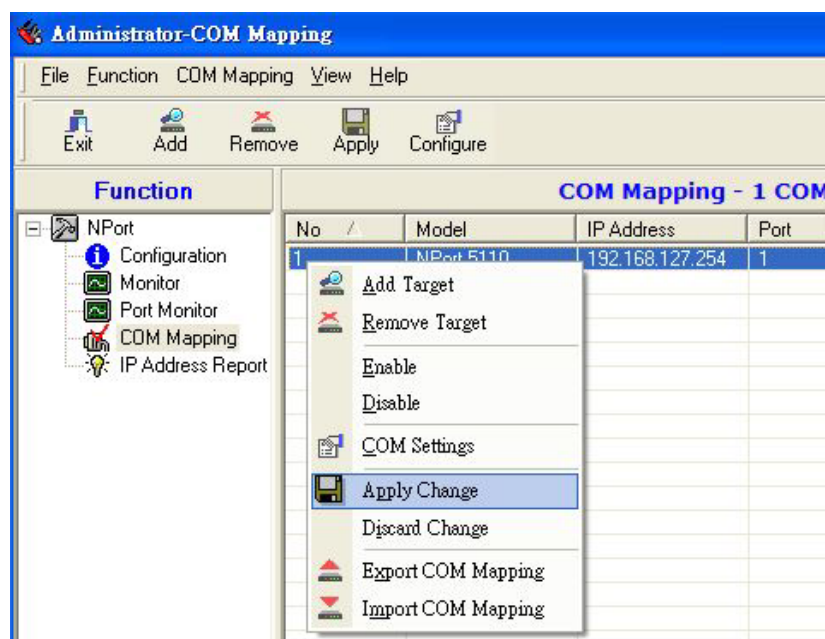



## IP Location

When NPort 5110 is used in a dynamic IP environment, users must spend more time with IP management tasks. NPort 5110 products help out by periodically reporting their IP address to the IP location server, in case the dynamic IP has changed.

- Receive NPort 5110's IP location report
  - Centralize NPort 5110's IP management in a dynamic IP environment.
1. Configure NPort 5110 to get an IP address dynamically. You may use **DHCP**, **BOOTP**, or **DHCP/BOOTP**. Assign the remote Auto IP report server's IP address and UDP port.

Main Menu
Overview
Basic Settings
Network Settings
Serial Settings
Port 1
Operating Settings
Port 1
Accessible IP Settings
Auto Warning Settings
Change Password
Load Factory Default
Save/Restart

## Network Settings

IP address	192.168.127.254
Netmask	255.255.255.0
Gateway	
IP configuration	Static
DNS server 1	
DNS server 2	

### SNMP Setting

SNMP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Community name	public
Contact	
Location	

### IP Address report


Auto report to IP	
Auto report to TCP port	4002
Auto report period	10 seconds

Submit


2. Select **IP Location Report** and click the right mouse button to select Settings.

[illegible]

- Next, configure the **Local Listen Port** to be the same as the NPort 5110's "Auto report to UDP port" setting.

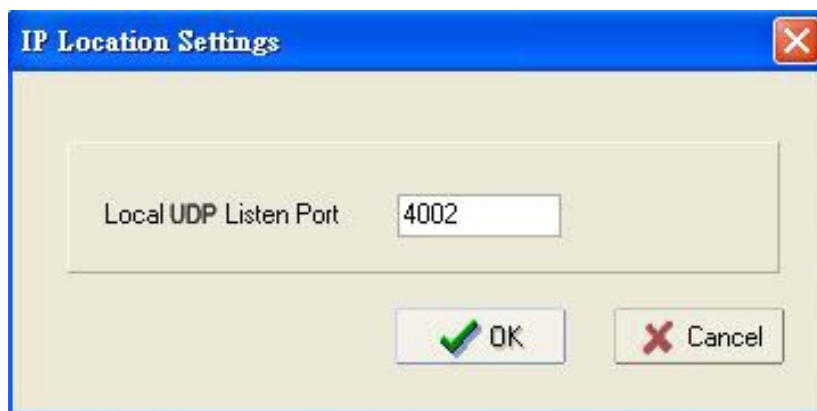

- Click **Go** to start receiving the Auto IP address report from the NPort 5110.

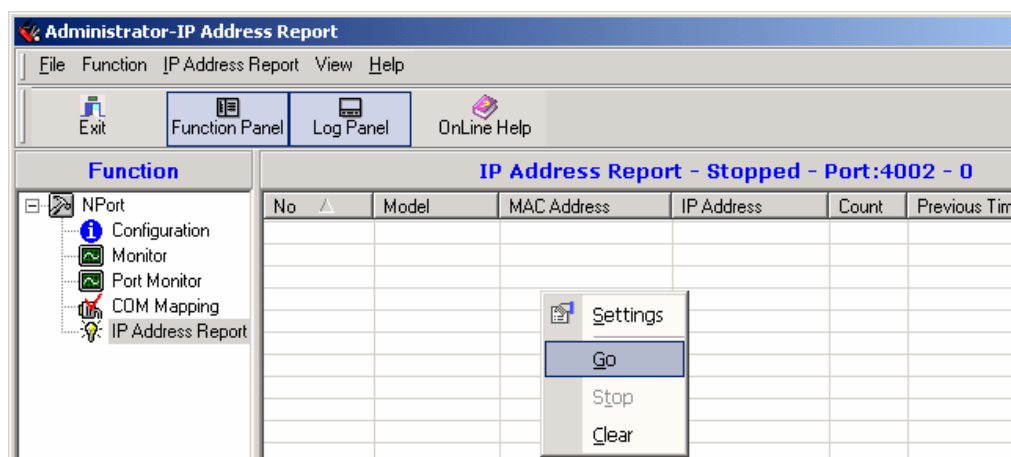

The following topics are covered in this chapter:

- ☐ **Overview**
- ☐ **IP Serial LIB Function Groups**
- ☐ **Example Program**

## Overview

### What is IP Serial Library?

IP Serial Library is a Windows library with frequently used serial command sets and subroutines. IP Serial Library is designed to reduce the complexity and poor efficiency of serial communication over TCP/IP. For example, Telnet can only transfer data, but it can't monitor or configure the serial line's parameters.

### Why Use IP Serial Library?


For programmers who are familiar with serial communication, IP Serial Library provides well-designed function calls that have the same style as Moxa's PComm Library.

IP Serial Library is amazingly simple and easy to understand. By including it in your VB, C, or Delphi programming environment, you can program your own TCP/IP application with the ability to control serial communication parameters.

NPort 5110 uses 2 TCP ports for communication between the NPort 5110 and host computer's Real COM driver. NPort 5110 uses a data port and command port to provide pure data transfer without decode and encode. Compared to using only one TCP port to control serial communication (such as RFC 2217), IP Serial Library uses a command port to communicate with NPort 5110 from the user's program. IP Serial Library not only runs with excellent efficiency but also runs without any decode or encode problems.

### How to install IP Serial Library

IP Serial Lib comes with the NPort 5110 Administration Suite. Refer to the IPSerial directory for more details about the function definitions.

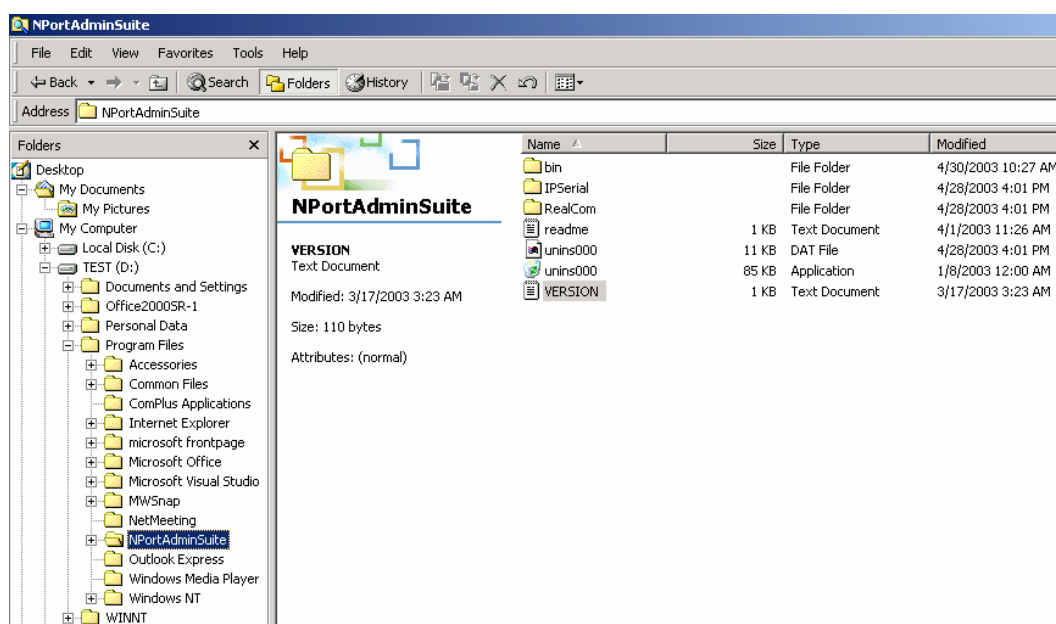

## IP Serial LIB Function Groups

Server Control	Port Control	Input/Output Data	Port Status Inquiry	Miscellaneous
nsio_init nsio_end nsio_resetserver nsio_checkalive	nsio_open nsio_close nsio_ioctl nsio_flowctrl nsio_DTR nsio_RTS nsio_lctrl nsio_baud nsio_resetport	nsio_read nsio_SetReadTimeouts nsio_write nsio_SetWriteTimeouts	nsio_lstatus nsio_data_status	nsio_break nsio_break_on nsio_break_off nsio_breakcount

## Example Program

```

char NPort
5110-Nip="192.168.1.10";          /*data buffer, 255 chars */
char buffer[255];                /*1st port */
int port = 1;                    /* port handle */
int portid;                      /*initial IP Serial Library */
nsio_init();                     /*1st port, NPort 5110
portid = nsio_open(NPort 5110ip, IP=192.168.1.10 */
port);                          /*set 9600, N81 */
nsio_ioctl(portid, B9600, (BIT_8 | /* wait for 1000 ms for data */
STOP_1 | P_NONE) );            /* read 200 bytes from port 1 */
sleep(1000);                    /* close this serial port */
nsio_read(port, buffer, 200);    /* close IP Serial Library */
nsio_close(portid);
nsio_end();

```

# A

## Pinouts and Cable Wiring

---


In this appendix, we cover the following topics.

- ❑ **Port Pinout Diagrams**
  - Ethernet Port Pinouts
  - Serial Port Pinouts
- ❑ **Cable Wiring Diagrams**
  - Ethernet Cables

## Port Pinout Diagrams

### Ethernet Port Pinouts


Pin	Signal
1	Tx+
2	Tx-
3	Rx+
6	Rx-

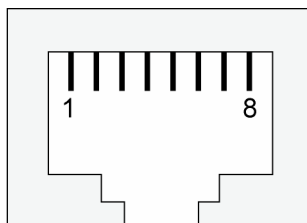

### Serial Port Pinouts

#### DB9 Male RS-232 port pinouts for NPort 5110

PIN	SIGNAL
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	---

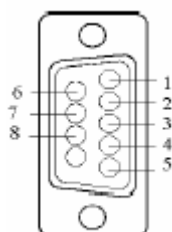


## Cable Wiring Diagrams

### Ethernet Cables



#### Cable Wiring

3	_____	3
6	_____	6
1	_____	1
2	_____	2

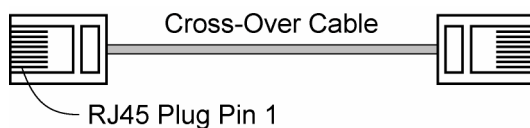

#### Cable Wiring

3	_____	1
6	_____	2
1	_____	3
2	_____	6



## Well Known Port Numbers

---

In this appendix, which is included for your reference, we provide a list of Well Known port numbers that may cause network problems if you set NPort 5110 to one of these ports. Refer to RFC 1700 for Well Known port numbers, or refer to the following introduction from the IANA.

The port numbers are divided into three ranges: the **Well Known Ports**, the **Registered Ports**, and the **Dynamic and/or Private Ports**.

The Well Known Ports range from 0 through 1023.

The Registered Ports range from 1024 through 49151.

The Dynamic and/or Private Ports range from 49152 through 65535.

The Well Known Ports are assigned by the IANA, and on most systems, can only be used by system processes or by programs executed by privileged users. The following table shows famous port numbers among the well-known port numbers. For more details, please visit the IANA website at <http://www.iana.org/assignments/port-numbers>.

TCP Socket	Application Service
0	Reserved
1	TCP Port Service Multiplexor
2	Management Utility
7	Echo
9	Discard
11	Active Users (systat)
13	Daytime
15	Netstat
20	FTP data port
21	FTP CONTROL port
23	Telnet
25	SMTP (Simple Mail Transfer Protocol)
37	Time (Time Server)

TCP Socket	Application Service
42	Host name server (names server)
43	Whois (nickname)
49	(Login Host Protocol) (Login)
53	Domain Name Server (domain)
79	Finger protocol (Finger)
80	World Wide Web HTTP
119	Network news Transfer Protocol (NNTP)
123	Network Time Protocol
213	IPX
160 – 223	Reserved for future use

UDP Socket	Application Service
0	Reserved
2	Management Utility
7	Echo
9	Discard
11	Active Users (sysstat)
13	Daytime
35	Any private printer server
39	Resource Location Protocol
42	Host name server (names server)
43	Whois (nickname)
49	(Login Host Protocol) (Login)
53	Domain Name Server (domain)
69	Trivial Transfer Protocol (TETP)
70	Gopher Protocol
79	Finger Protocol
80	World Wide Web HTTP
107	Remote Telnet Service
111	Sun Remote Procedure Call (Sunrpc)
119	Network news Transfer Protocol (NNTP)
123	Network Time protocol (ntp)

<b>UDP Socket</b>	<b>Application Service</b>
161	SNMP (Simple Network Mail Protocol)
162	SNMP Traps
213	IPX (Used for IP Tunneling)



## SNMP Agents with MIB II & RS-232 Like Groups

---

NPort 5110 has built-in SNMP (Simple Network Management Protocol) agent software that supports SNMP Trap, RFC1317 RS-232 like groups and RFC 1213 MIB-II. The following table lists the standard MIB-II groups, as well as the variable implementation for NPort 5110.

### RFC1213 MIB-II supported SNMP variables:

System MIB	Interfaces MIB	IP MIB	ICMP MIB
SysDescr	ifNumber	ipForwarding	IcmpInMsgs
SysObjectID	ifIndex	ipDefaultTTL	IcmpInErrors
SysUpTime	ifDescr	ipInreceives	IcmpInDestUnreachs
SysContact	ifType	ipInHdrErrors	IcmpInTimeExcds
SysName	ifMtu	ipInAddrErrors	IcmpInParmProbs
SysLocation	ifSpeed	ipForwDatagrams	IcmpInSrcQuenchs
SysServices	ifPhysAddress	ipInUnknownProtos	IcmpInRedirects
	ifAdminStatus	ipInDiscards	IcmpInEchos
	ifOperStatus	ipInDelivers	IcmpInEchoReps
	ifLastChange	ipOutRequests	IcmpInTimestamps
	ifInOctets	ipOutDiscards	IcmpTimestampReps
	ifInUcastPkts	ipOutNoRoutes	IcmpInAddrMasks
	ifInNUcastPkts	ipReasmTimeout	IcmpOutMsgs
	ifInDiscards	ipReasmReqds	IcmpOutErrors
	ifInErrors	ipReasmOKs	IcmpOutDestUnreachs

System MIB	Interfaces MIB	IP MIB	ICMP MIB
SysServices	ifInUnknownProtos	ipReasmFails	IcmpOutTimeExcds
	ifOutOctets	ipFragOKs	IcmpOutParmProbs
	ifOutUcastPkts	ipFragFails	IcmpOutSrcQuenchs
	ifOutNUcastPkts	ipFragCreates	IcmpOutRedirects
	ifOutDiscards	ipAdEntAddr	IcmpOutEchos
	ifOutErrors	ipAdEntIfIndex	IcmpOutEchoReps
	ifOutQLen	ipAdEntNetMask	IcmpOutTimestamps
	ifSpecific	ipAdEntBcastAddr	IcmpOutTimestampReps
		ipAdEntReasmMaxSize	IcmpOutAddrMasks
		IpNetToMediaIfIndex	IcmpOutAddrMaskReps
		IpNetToMediaPhysAddress	
		IpNetToMediaNetAddress	
		IpNetToMediaType	
		IpRoutingDiscards	

UDP MIB	TCP MIB	SNMP MIB
UdpInDatagrams	tcpRtoAlgorithm	snmpInPkts
UdpNoPorts	tcpRtoMin	snmpOutPkts
UdpInErrors	tcpRtoMax	snmpInBadVersions
UdpOutDatagrams	tcpMaxConn	snmpInBadCommunityNames
UdpLocalAddress	tcpActiveOpens	snmpInASNParseErrs
UdpLocalPort	tcpPassiveOpens	snmpInTooBigs
	tcpAttempFails	snmpInNoSuchNames
<b>Address Translation MIB</b>	tcpEstabResets	snmpInBadValues
AtIfIndex	tcpCurrEstab	snmpInReadOnlys
AtPhysAddress	tcpInSegs	snmpInGenErrs
AtNetAddress	tcpOutSegs	snmpInTotalReqVars

Address Translation MIB	TCP MIB	SNMP MIB
AtNetAddress	tcpRetransSegs	snmpInTotalSetVars
	tcpConnState	snmpInGetRequests
	tcpConnLocalAddress	snmpInGetNexts
	tcpConnLocalPort	snmpInSetRequests
	tcpConnRemAddress	snmpInGetResponses
	tcpConnRemPort	snmpInTraps
	tcpInErrs	snmpOutTooBigs
	tcpOutRsts	snmpOutNoSuchNames
		snmpOutBadValues
		snmpOutGenErrs
		snmpOutGetRequests
		snmpOutGetNexts
		snmpOutSetRequests
		snmpOutGetResponses
		snmpOutTraps
		snmpEnableAuthenTraps

**RFC1317: RS-232 MIB objects**

Generic RS-232-like Group	RS-232-like General Port Table	RS-232-like Asynchronous Port Group
rs232Number	rs232PortTable	rs232AsyncPortTable
	rs232PortEntry	rs232AsyncPortEntry
	rs232PortIndex	rs232AsyncPortIndex
	rs232PortType	rs232AsyncPortBits
	rs232PortInSigNumber	rs232AsyncPortStopBits
	rs232PortOutSigNumber	rs232AsyncPortParity
	rs232PortInSpeed	
	rs232PortOutSpeed	

The Input Signal Table	The Output Signal Table
rs232InSigTable	rs232OutSigTable
rs232InSigEntry	rs232OutSigEntry
rs232InSigPortIndex	rs232OutSigPortIndex
rs232InSigName	rs232OutSigName
rs232InSigState	rs232OutSigState

## Auto IP Report Protocol

NPort Series provides several ways to configure Ethernet IP addresses. One method is DHCP Client. When you set up the NPort to use DHCP Client to configure Ethernet IP addresses, a DHCP request is sent automatically over the Ethernet to find the DHCP Server. In response, the DHCP Server will send an available IP address to the NPort. The NPort will use this IP address for a period of time after receiving it. But the NPort will eventually send another DHCP request to the DHCP Server. Once the DHCP Server realizes that this IP address is to be released to other DHCP Clients, the NPort will be assigned a different IP address. For this reason, users sometimes find that the NPort will use different IP addresses at different, instead of always using the same IP address.

In order to find out which IP address the NPort is using, you need to configure parameters under **Network Settings** via your Web browser. The figure below shows NPort's Web console configuration window. Enter the IP address and the Port number of the PC that you want to send this information to.

The screenshot shows the NPort Web Console configuration window in Microsoft Internet Explorer. The browser's address bar displays <http://192.168.127.254/>. The page features the MOXA logo and the website [www.moxa.com](http://www.moxa.com). A left-hand navigation menu lists various settings categories, including 'Main Menu', 'Overview', 'Basic Settings', 'Network Settings', 'Serial Settings', 'Operating Settings', 'Accessible IP Settings', 'Auto warning Settings', 'Change Password', 'Load Factory Default', and 'Save/Restart'. The 'Network Settings' section is currently active, displaying a form with the following fields:

Network Settings	
IP address	192.168.127.254
Netmask	255.255.0.0
Gateway	255.255.255.255
IP configuration	DHCP
DNS server 1	
DNS server 2	
SNMP Setting	
SNMP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Community name	public
Contact	
Location	
IP Address report	
Auto report to IP	192.168.2.149
Auto report to UDP port	4002
Auto report period	10 seconds

The 'Auto report to IP' field, which contains the value '192.168.2.149', is circled in red.



You will then be able to develop your own programs to receive this information from the NPort. Here is NPort's Auto IP Report Protocol. Click on the following link to link to a specific example.

<http://web2.moxa.com.tw/services/download/download.asp>

#### Auto IP Report Format

"MOXA", 4 bytes	Info[0]	Info[1]	...	Info[n]
-----------------	---------	---------	-----	---------

#### Info [n]

Field	ID	Length	Data
Length	1	1	Variable, Length is "Length Field"

#### ID List

ID Value	Description	Length	Note
1	Server Name	Variable	ASCII char
2	Hardware ID	2	Little-endian
3	MAC Address	6	6 bytes MAC address. If the MAC address is "00-90-E8-01-02-03", the MAC[0] is 0, MAC[1] is 0x90(hex), MAC[2] is 0xE8(hex), and so on.
4	Serial Number	4, DWORD	Little-endian
5	IP Address	4, DWORD	Little-endian
6	Netmask	4, DWORD	Little-endian
7	Default Gateway	4, DWORD	Little-endian
8	Firmware Version	4, DWORD	Little-endian Ver1.3.4= 0x0103040
9	AP ID	4, DWORD	Little-endian

#### AP ID & Hardware ID Mapping Table

AP ID	Hardware ID	Product
0x80005110	0x5110	NPort 5110
0x80005000	0x0504	NPort 5410
0x80005000	0x0534	NPort 5430
0x80005000	0x1534	NPort 5430I
0x80000312	0x0312	NPort 5230
0x80000312	0x0322	NPort 5210
0x80000312	0x0332	NPort 5232
0x80000312	0x1332	NPort 5232I
0x80005610	0x5618	NPort 5610-8
0x80005610	0x5613	NPort 5610-16
0x80005610	0x5638	NPort 5630-8
0x80005610	0x5633	NPort 5630-16

## **Service Information**

---

This appendix shows you how to contact Moxa for information about this and other products, and how to report problems.

In this appendix, we cover the following topics.

- ☐ **MOXA Internet Services**
- ☐ **Problem Report Form**
- ☐ **Product Return Procedure**

## MOXA Internet Services

Customer satisfaction is our number one concern, and to ensure that customers receive the full benefit of our products, Moxa Internet Services has been set up to provide technical support, driver updates, product information, and user's manual updates.

The following services are provided

E-mail for technical support.....[support@moxa.com.tw](mailto:support@moxa.com.tw)

Website for product information:

.....<http://www.moxa.com>

..... or

.....<http://www.moxa.com.tw>

## Problem Report Form

### MOXA NPort 5110

<b>Customer name:</b>	
<b>Company:</b>	
<b>Tel:</b>	<b>Fax:</b>
<b>Email:</b>	<b>Date:</b>

**Moxa Product:** NPort 5110

**Serial Number:** \_\_\_\_\_

**Problem Description:** Please describe the symptoms of the problem as clearly as possible, including any error messages you see. A clearly written description of the problem will allow us to reproduce the symptoms, and expedite the repair of your product.

---

---

---

---

---

---

---

---

---

---

---

---

## Product Return Procedure

For product repair, exchange, or refund, the customer must:

- ◆ Provide evidence of original purchase.
- ◆ Obtain a Product Return Agreement (PRA) from the sales representative or dealer.
- ◆ Fill out the Problem Report Form (PRF). Include as much detail as possible for a shorter product repair time.
- ◆ Carefully pack the product in an anti-static package, and send it, pre-paid, to the dealer. The PRA should be visible on the outside of the package, and include a description of the problem, along with the return address and telephone number of a technical contact.